

**As you are now the owner of this document which should have come to you for free, please consider making a donation of £1 or more for the upkeep of the (Radar) website which holds this document. I give my time for free, but it costs me around £300 a year to bring this document to you. You can donate here <https://blunham.com/Radar>, thank you.**

**Do not upload this copyright pdf document to any other website. Breaching copyright may result in a criminal conviction and large payment for Royalties.**

This document was generated by me, Colin Hinson, from a document held at R.A.F. Henlow Signals Museum which is believed to be out of copyright or Crown Copyright. It is presented here (for free) under the Open Government Licence (O.G.L.) if under Crown Copyright and this version of the document is my copyright (along with the Crown Copyright) in much the same way as a photograph would be. It should be noted that most of the pages are identifiable as having been processed by me. If you believe the original document to be under copyright, please contact me.

The document should have been downloaded from my website <https://blunham.com/Radar>, or any mirror site named on that site. If you downloaded it from elsewhere, please let me know (particularly if you were charged for it). You can contact me via my Genuki email page: <https://www.genuki.org.uk/big/eng/YKS/various?recipient=colin>

**You may not copy the file for onward transmission of the data nor attempt to make monetary gain by the use of these files. If you want someone else to have a copy of the file, point them at the website (<https://blunham.com/Radar>). Please do not point them at the file itself as it may move or the site may be updated.**

---

I put a lot of time into producing these files which is why you are met with this page when you open the file.

In order to generate this file, I need to scan the pages, split the double pages and remove any edge marks such as punch holes, clean up the pages, set the relevant pages to be all the same size and alignment. I then run Omnipage (OCR) to generate the searchable text and then generate the pdf file.

Hopefully after all that, I end up with a presentable file. If you find missing pages, pages in the wrong order, anything else wrong with the file or simply want to make a comment, please drop me a line (see above).

If you find the file(s) of use to you, you might like to make a donation for the upkeep of the website – see <https://blunham.com/Radar> for a link to do so.

*Colin Hinson*

*In the village of Blunham, Bedfordshire, UK.*

AIR PUBLICATION

**2537 F**

VOLUME 1

PART 1

**VALVE TESTER  
CT. 160**

**GENERAL  
INFORMATION**

Prepared by direction of  
the Minister of Supply

*J. R. C. Helmore*

Promulgated by Command  
of the Air Council

*W. J. Dean.*

**A I R M I N I S T R Y**

WHEN AN AMENDMENT TO THIS BOOK IS PROMULGATED THE BRIEF DETAILS  
REQUIRED BELOW ARE TO BE FILLED IN.

| AMENDMENT<br>No. | AUTHORITY<br>(A.F.O. No. ETC.)         | DATE OF<br>INSERTION   | INITIALS                     |
|------------------|--|------------------------|------------------------------|
| 1.<br>2.         | A.F.O. P. 366/56.<br>A.F.O. P. 368/57. | 16.12.58.<br>16.12.58. | J Davenport.<br>J Davenport. |

Admiralty, S.W.1.  
1954.

R.E. 421/54

B.R.1771(13)A/A.P.2537F Vol. 1 “ Handbook for A.P.61761 ‘ AVO ’ Valve Tester  
C.T.160. Volume 1—Technical Description, 1954 ”, is hereby promulgated.

By Command of  
Their Lordships



**ADMIRALTY**

By Order of the  
Air Council



**AIR MINISTRY**

**B. R. 1771 (13) A**

**A.P. 2537F VOL. 1**

**COMMON NAVAL RADIO  
TEST EQUIPMENT**

**HANDBOOK FOR  
A. P. 61761**

**“AVO” VALVE TESTER CT. 160  
VOLUME 1**

—

**TECHNICAL DESCRIPTION**

—

**1954**

**Any suggestions for amendments or additions to this  
book should be submitted through the usual channels.**

—

**RADIO EQUIPMENT DEPARTMENT, ADMIRALTY**

**JUNE 1955 (R.E.421/54)**

# HANDBOOK FOR "AVO" VALVE TESTER C.T.160

## CONTENTS

|                         |  | <i>Page</i> |
|-------------------------|--|-------------|
| Summary of Data .. .. . |  | 7           |
| PART 1                  |  |             |
| <b>CHAPTER 1.</b>       | <b>TECHNICAL DESCRIPTION</b>   |             |
| 1                       | Introduction .. .. .   | 9           |
| 2— 9                    | Principles of operation .. .. .  | 9           |
| 10—21                   | Basic Circuitry .. .. .  | 10          |
| 22—25                   | The Valve Holder Panel .. .. .   | 15          |
| 26                      | General Construction .. .. .   | 19          |
| 27                      | Mains Supply .. .. .   | 19          |
| <b>CHAPTER 2.</b>       | <b>THE VALVE PANEL AND CONTROL UNIT</b>  |             |
| 1— 6                    | The Valve Panel and Selector Switch .. .. .  | 22          |
| 7— 9                    | Procedure for setting up Valve Base Connections .. .. .  | 23          |
| 10                      | Provision for new Valve Bases .. .. .  | 25          |
| 11                      | The Control Unit and its Function .. .. .  | 25          |
| 12—14                   | The Mains Voltage Selector .. .. .   | 25          |
| 15—20                   | The Circuit Selector .. .. .   | 26          |
| 21                      | The Electrode Selector .. .. .   | 26          |
| 22                      | The Heater Voltage Switches .. .. .  | 26          |
| 23                      | The Anode and Screen Voltage Switches .. .. .  | 27          |
| 24—25                   | The Anode Current Controls .. .. .   | 27          |
| 26                      | The Negative Grid Volts Control .. .. .  | 28          |
| 27                      | The Set mA/V Control .. .. .   | 28          |
| <b>CHAPTER 3.</b>       | <b>OPERATING INSTRUCTIONS AND GENERAL PROCEDURE FOR TESTING<br/>A VALVE</b>                                  |             |
| 1                       | The connection of the instrument to a supply voltage .. .. .   | 31          |
| 2                       | Final setting of Mains Voltage Selector Panel .. .. .  | 31          |
| 3— 5                    | Insulation checks with the valve cold .. .. .  | 31          |
| 6— 7                    | Insulation checks with the valve hot .. .. .   | 32          |
| 8                       | Cathode to Heater insulation check .. .. .   | 33          |
| 9—15                    | Determination of valve condition from Static Characteristic Data .. .. .                                     | 33          |
| 16—17                   | To check relative goodness of valve in conjunction with coloured comparison<br>scale .. .. .                 | 34          |
|                         | (a) Using recommended anode current .. .. .  | 34          |
|                         | (b) Using recommended negative grid voltage .. .. .  | 34          |
| 18— 19                  | To check valve by direct reading of mutual conductance (mA/V)<br>(a) Using recommended anode current .. .. . | 35          |
|                         | (b) Using recommended negative grid voltage .. .. .  | 35          |
| 20—21                   | To check valves having a mutual conductance less than 1mA/V .. .. .  | 35          |
| 22—23                   | Measurement of Grid Current .. .. .  | 36          |
| 24—30                   | Checking Power Rectifiers .. .. .  | 36          |
| 31                      | Checking Signal Diodes .. .. .   | 37          |
| 32                      | Instructions for testing specific valve types .. .. .  | 37          |
| 33—34                   | Multiple Diodes and Rectifiers (D, DD, DDD, R, RR) .. .. .   | 37          |
| 35—37                   | Diodes and Rectifiers combined with other electrode assemblies (DT, DDT,<br>DP, DDP, DTP) .. .. .            | 38          |
| 38                      | Double Triodes and Double Pentodes (TT, PP) .. .. .  | 38          |
| 39—43                   | Frequency Changers (H, TH, O, TP) .. .. .  | 38          |
| 44—45                   | The use of the Links on the Valve Panel of the instrument .. .. .  | 39          |
| 46                      | Checking Tuning Indicators (TI) .. .. .  | 39          |
| 47                      | Checking Gasfilled Rectifiers (GR) .. .. .   | 40          |
| 48                      | Checking Cold Cathode Rectifiers (CCR) .. .. .   | 40          |

## PART 2

### CHAPTER 1. CALIBRATION AND MAINTENANCE OF THE INSTRUMENT

|       |   |    |
|-------|---|----|
| 1     | Instruments to be employed .. .. .                                  | 41 |
| 2— 3  | 500 c/s A.C. Supply operation and its relation to Servicing .. .. . | 41 |
| 4     | To Check Accuracy of Instrument .. .. .                             | 42 |
| 5— 8  | To obtain standard figures for a valve using D.C. Supplies .. .. .  | 42 |
| 9     | Mechanical features .. .. .   | 43 |
| 10    | Removal of the instrument from its case .. .. .                     | 43 |
| 11    | Simple faults .. .. .   | 44 |
| 12—14 | Relay operates and fails to clear .. .. .                           | 44 |
| 15    | Voltage Checks with no valve under test .. .. .                     | 44 |
| 16    | Heater Voltages .. .. .   | 44 |
| 17    | Anode Voltages .. .. .  | 45 |
| 18    | Screen Voltages .. .. .   | 45 |
| 19—21 | Calibration of the Instrument .. .. .                               | 46 |
| 22    | Checking the Set mA/V Control .. .. .                               | 47 |
| 23—24 | Checking the SET ~ Indication .. .. .                               | 47 |
| 25    | Ia Calibration Check .. .. .  | 47 |
| 26—27 | The Indicating Meter .. .. .  | 47 |
| 28—30 | Adjustment of Protective Relay .. .. .                              | 48 |
| 31—32 | Servicing the Valve Holder Panel .. .. .                            | 49 |
| 33    | Removal and replacement of knobs and setting of knob skirts .. .. . | 49 |
| 34    | Setting the mA/V Dial .. .. .                                       | 49 |



THE "AVO" VALVE TESTER C.T. 160.

# THE "AVO" VALVE TESTER C.T.160

## SUMMARY OF DATA

### Purpose

A simple-to-use, double purpose Valve Tester with two functions:—

- (a) The rapid diagnosis of the condition of a valve under test, the instrument operating as a simple "go" or "no go" device.
- (b) The production of sufficient data to enable an operator to plot static characteristics, or similar information, using selected anode loads.

The instrument will check the majority of receiving valves, and some small transmitting valves.

### Description

The instrument, which has been constructed to conform with the appropriate clauses of the U.K. Government Climatic Tests K114, is housed within a metal carrying case. The case comprises two parts, the base containing the panel which carries the majority of the controls, and the lid, within which is housed the test panel for the valve under test. The instrument is supplied with a cable for connection to the mains.

The majority of the 22 Valve Bases provided, accommodate valves on standard bases in common use, but in addition, disc-seal, co-axial and wire-ended valves can also be tested. A Nine Way Roller Selector Switch is provided to enable any valve pin to be connected to any electrode circuit. This Selector Switch is marked with figures and letters, the figures enabling code numbers to be set up from the "AVO" Valve Data Handbook, whilst the letters signify the particular electrode connected to the selected pin.

The instrument control panel carries the following:—

- The Heater Volts Selector Switch.
- The Anode Volts Selector Switch.
- The Screen Volts Selector Switch.
- The Negative Grid Volts Control.
- The Mains Voltage Selector.
- The Fuse Carriers.
- The Visual Fault Indicator.
- The Indicating Meter.
- The Anode Current Controls.
- The Set mA/V (slope) Control.
- The Circuit Selector Switch.
- The Electrode Selector Switch.
- The Mains ON/OFF Switch.

### Performance

In addition to the detailed description of the instrument, contained in this Handbook abbreviated working instructions are given as a preface to the Handbook for A.P.61761 "AVO" Valve Tester C.T.160, Volume 2 B.R.1771(13)B.

The instrument will:—

- (1) Check heater continuity.
- (2) Measure insulation between electrodes with valve cold.
- (3) Measure insulation between electrodes with valve hot.
- (4) Measure cathode/heater insulation (for indirectly heated valves).
- (5) Rapidly indicate whether a valve is good or bad, use being made of a coloured replace/good scale with mutual conductance as the operative parameter.
- (6) Measure the mutual conductance (slope) of a valve, the applied incremental grid voltage being inversely proportional to the “slope” of the valve.
- (7) Measure anode current in single and multi-anode valves.
- (8) Produce sufficient data to enable static characteristic curves to be plotted on graph paper.
- (9) Check rectifiers and diodes under load conditions.
- (10) Measure gas current, limited to  $100\mu\text{A}$ .
- (11) Measure Screen Current.

The instrument is fitted with an automatic aural and visual warning device which operates if certain circuits within the instrument are inadvertently overloaded by the operator, or if a short occurs upon a valve under test.

The use of specially designed circuits, virtually eliminate the possibility of the valve under test bursting into spurious oscillation.

### **Power Requirements**

The instrument will operate from the following 50—500c/s AC supplies:—

105—120V, 175—250V. (Adjustment can be made at every 5V.)

### **Power Consumption**

50 watts, maximum.

### **Physical Data**

Weight: 24 lbs. (approx.)

Height: 10"

Depth:  $11\frac{1}{2}$ "

Width:  $15\frac{1}{2}$ "

### **Joint Services Designation**

“AVO” Valve Tester CT160.



## PART 1.

### CHAPTER 1

#### TECHNICAL DESCRIPTION

##### Introduction

1. Whilst good/bad testing on a semi-production basis will undoubtedly be the major use for this tester, it is certain that the instrument will find considerable use in laboratories and service departments where engineers and skilled personnel will be available, and where more precise details of valve performance can be used to advantage. To this end, additional facilities on the tester, enable  $I_a/V_a$ ,  $I_a/V_s$  and  $I_a/V_g$  characteristics to be plotted over a wide range of voltages, these being readily available from the calibrated panel controls.

##### Principles of Operation

2. The tester is basically designed to check the valve according to its static characteristics which would normally require the provision of the requisite range of variable DC supplies. The difficulty lies in the regulation problems involved in the supply of the wide range of DC anode and screen voltages, on which the loading might vary from a fraction of a mA to over 100 mA, dependent on the type of valve being tested, and the nature of the test being performed. Such a requirement could of course be met by the provision of a number of regulated power supplies, which would render the instrument cumbersome and expensive, whilst a large amount of metering, would not only mean additional expense, but also make the instrument difficult to use, and would not entirely overcome the problem.

3. It can be shown, however, that if alternating electrode voltages are applied in their correct proportions, an amplifying valve can (by virtue of its property of self rectification) be caused to give DC anode and screen currents which for all practical purposes bear a constant relationship to those obtained from its DC static characteristics.

4. This immediately simplifies the problems of power supply to the valve under test. The design of transformers to give negligible regulation errors over the range of secondary currents involved is comparatively simple, whilst the range of electrode voltages may be simply provided by predetermined secondary tappings selected by calibrated switches, thus minimising to a very large extent problems of size, weight and cost, and eliminating the necessity for separate metering.

5. A slight difficulty occurs in the supply of the variable negative grid bias voltage, which would normally consist of an alternating voltage of suitable magnitude applied in anti-phase to the anode voltage. Since rectification occurs at the anode (and screen) and the grid should pass no current it will be readily seen that during the half cycle where the anode and screen are passing no current, a positive half cycle of considerable magnitude is applied to the grid with the result that the latter can pass damaging current and in certain circuit conditions phase changes can occur that disturb the 180° relationship between the anode and grid voltages during the operative half cycle.

6. Since no current is taken from the grid voltage supply however, and the voltages involved are not very high, the inclusion of a simple half wave rectifier without smoothing between the transformer winding and the variable grid volts supply will suppress the positive half cycle whilst still maintaining the sinusoidal form of the operative negative half cycle.

7. Using the simple expression for the anode current of a triode  $I_a = \frac{K}{R_a}(E_a + \mu E_g)$

and transforming this for AC operation on the positive half cycle of applied anode volts we have:—

$$I_a (\text{mean}) = \frac{K}{R_a} \cdot \frac{\omega}{\pi} \left\{ \int_{\omega t=0}^{\omega t=\pi} E_a \sin \omega t + \mu \int_{\omega t=0}^{\omega t=\pi} E_g \sin \omega t \right\}$$

8. Deriving this in terms of RMS applied voltages and remembering that anode current flows only on the positive half cycle and will be read on a mean reading DC meter, we have:—

$$I_a (\text{mean}) = \frac{K}{2R_a} \left\{ E_a^{(\text{RMS})} \times \frac{1}{1.1} + \mu E_g^{(\text{DC})} \times 2 \right\}$$

$E_g$  (DC) is the applied half sine wave DC as read on a mean reading DC voltmeter,  $K$  being a constant. The above relation holds equally well for screen grid or pentode valves which would follow the general form

$$I_a = f \left\{ E_a + \mu_1 \left( \frac{s}{g} \right) E_s + \mu_2 \left( \frac{a}{g} \right) E_a \right\}$$

9. Thus with an applied RMS anode (and or screen) voltage equal to  $1.1 \times V_a$  (DC) and a mean value of half wave rectified bias voltage equal to  $0.5 \times V_g$  (DC) then the valve will read a mean DC anode current equal to one half of the DC anode current taken from the static characteristics if  $V_a$  (DC) and  $V_g$  (DC) were the applied DC test volts. This relationship holds for all practical purposes over the full characteristic and is the basis of operation of the CT160 enabling accurate testing of valves, at any point on their characteristic, with simple and small apparatus. This accuracy is just as necessary on the simple “go”/“no go” type of instrument as on a complete characteristic meter, as it may be necessary to set the test point anywhere on the characteristic to correspond to required working conditions. Further, in the absence of any printed or predetermined test figure, it must be possible to determine test conditions directly from manufacturers’ published curves or data.

### Basic Circuitry

10. The principles of operation of the main function of the tester—the comparative testing of mutual conductance—lie in the application of anode, screen, grid and heater

voltages corresponding to the working point of the valve and backing off to zero the standing anode current thus obtained. A small incremental bias is applied to the valve and the change in anode current thus obtained is a measure of the mutual conductance of the valve. The figure is then compared with the correct mutual conductance to give comparative goodness on a coloured scale.

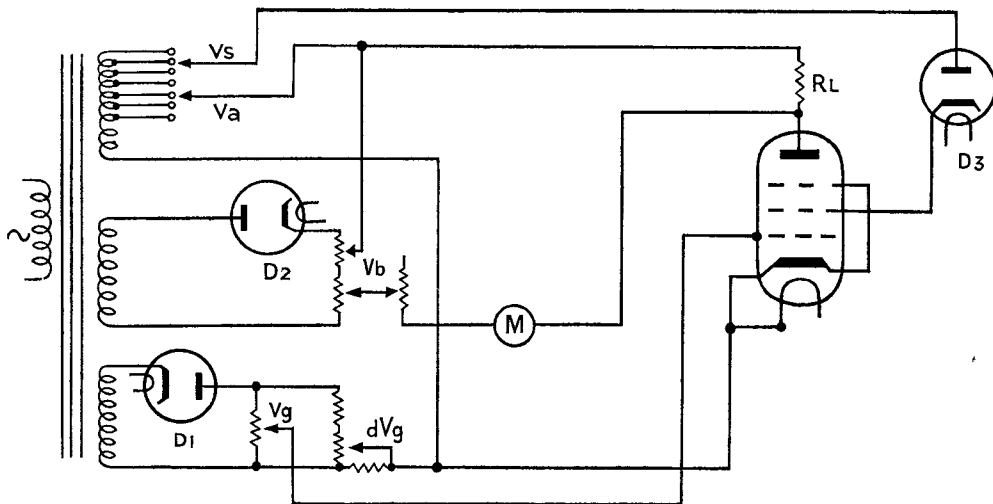


FIG. 1.

BASIC CIRCUIT FOR CHECKING OF MUTUAL CHARACTERISTICS.

11. Figure 1 shows the fundamental circuit used in this measurement. With the requisite electrode voltages applied to the valve, the half wave anode current causes a voltage drop in the resistor  $R_L$ , which is sufficiently low resistance not to influence the characteristics. This voltage is backed off by a voltage of similar form from the Control  $V_b$ . The voltage difference across the two arms of the bridge thus formed is shown on the DC millivoltmeter  $M$ . When this difference is zero, the voltage  $V_b$  is a measure of the anode current in  $R_L$  ( $I_a = \frac{V}{R_L}$ ) and the control  $V_b$  is thus calibrated in mA anode current.

A small change in bias is then applied to the valve from control  $dV_g$  which causes an increased voltage drop in  $R_L$  which unbalances the bridge. This unbalance is shown on  $M$  and is a measure of the mutual conductance of the valve. For a deflection on  $M$  of  $R_L$  millivolts then the mutual conductance of the valve in mA/V is  $\frac{1}{dV_g}$  (volts). In practice

the f.s.d. of  $M$  is 130%  $R_L$  millivolts and the scale is zoned in three colours—green from 130% to 70% indicating a good valve, white from 70% to 50% representing a failing valve, and red below 50% indicative of a reject. Thus the operating procedure after backing off the initial anode current is to set control  $dV_g$  (calibrated in mA/V to a maximum of 20) to the rated mutual conductance and note the deflection on the coloured scale of  $M$ , to determine valve goodness.

12. This arrangement, which gives an incremental grid voltage inversely proportional to slope, avoids errors otherwise likely to occur on high slope valves which often exhibit marked curvature of characteristic.

13. The stopper diode D3 shown in the screen supply circuit in figure 1 is to prevent erroneous results, and possibly valve overheating and damage, that can occur when testing certain beam tetrode valves with alternating anode and screen voltages.

14. As the applied electrode voltages approach zero during a portion of the operative cycle, the focusing of the electrode beam is to some extent upset with the result that the screen current decreases, and rapidly becomes negative, with consequent rapid and continuously increasing anode current. The rectifier, whilst presenting negligibly low forward impedance to normal screen current, by virtue of its high reverse impedance successfully prevents the flow of reverse screen current.

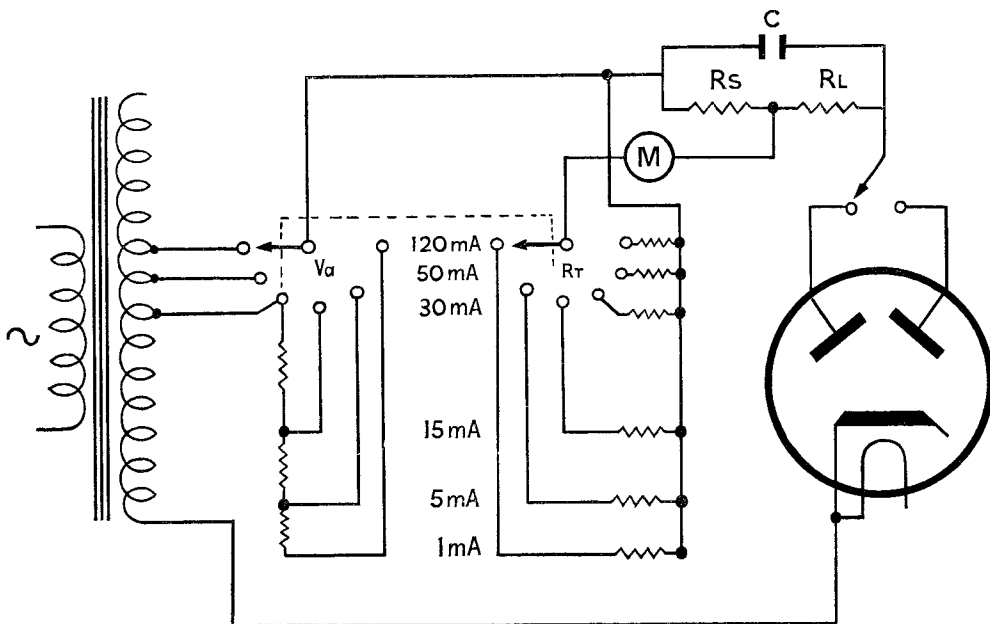


FIG. 2.

BASIC CIRCUIT FOR THE TESTING OF RECTIFIERS AND SIGNAL DIODES.

15. Figure 2 shows the basic circuit of the rectifier test. The rectifier is loaded with a resistor  $R_S + R_L$ , and a reservoir capacitor  $C$  in parallel. Sinusoidal voltage  $V_a$  is applied of sufficient magnitude to operate the rectifier on the linear portion of its characteristic, so that the combination should pass a rectified current equal to the maximum

load current for the valve. The millivoltmeter  $M$  measures the voltage developed across a proportion of the load  $R_L$  and is scaled by the appropriate range resistor  $R_T$  so that the rated current through the load will deflect  $M$  to the middle of the "good" zone of the scale. The proportionate deflection on the coloured scale denotes the state of the valve as before. Switching of anode voltage, meter range and load is ganged so that rectified currents of 1 mA, 5 mA, 15 mA, 30 mA, 60 mA and 120 mA per anode are available, each anode of a full wave rectifier being tested separately. The 1 mA and 5 mA ranges are suitable for signal diode testing.

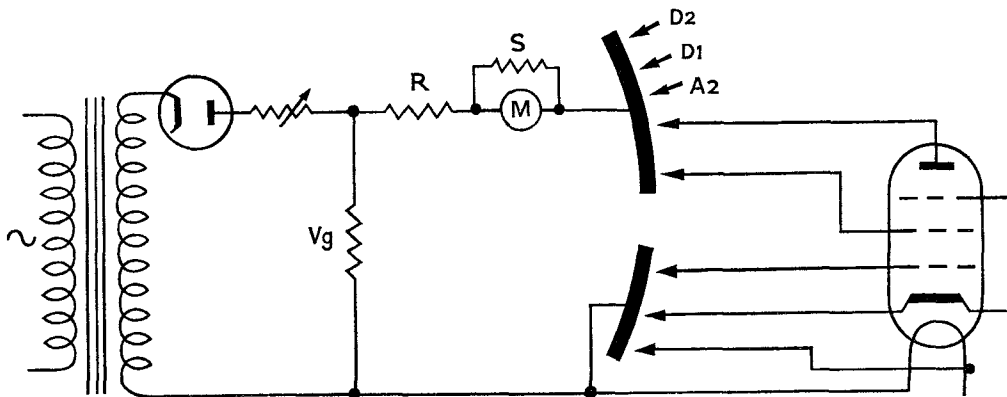


FIG. 4.

16. For the checking of inter-electrode insulation (figure 4) the unidirectional grid voltage  $V_g$  is applied through the meter  $M$  suitably loaded by a shunt(s) and high series resistor ( $R$ ) across the electrode groups, between which the insulation is to be measured.  $V_g$ ,  $S$  and  $R$  are such that the first meter indication is at  $25\text{ M}\Omega$ , full scale of course representing a dead short. The meter is suitably scaled for direct reading between these limits. This test serves for heater continuity and insulation measurements between anode and all other electrodes strapped, and screen and all others with the valve cold. With heater volts applied, the normal cathode/heater test is made, whilst a further test of cathode and heater strapped/rest takes care of sagging grids or filaments of directly heated valves. Since a short circuit deflection is, in fact, a measure of the grid voltage, this is used in checking the setting of the mains voltage of the instrument at position "Set  $\sim$ ". In this condition a short is put on the insulation test circuit, and the mains selector is adjusted until the meter reads full scale deflection, at which point the grid voltage and therefore all the other voltages working the instrument are correctly proportioned.

17. The full circuit (figure 3) shows how all the above combinations are incorporated in a single circuit, and selected by appropriate switch settings. Despite the full range of test voltages available and the comparative complexity of the circuit, the discreet use of ganged controls has reduced the operation to a simple and logical sequence.

18. Figure 5 shows in diagrammatic form the panel marking and it will be seen therefrom that in addition to the controls supplying the appropriate electrode voltages, only three controls are really involved in a measurement. THE CIRCUIT SELECTOR rotates through the various insulation checks to position TEST, at which point the circuit is operative for mutual conductance testing by backing off with the ANODE CURRENT controls and by setting control SET mA/V, at which point the meter shows the valve goodness. Separate electrode systems of dual or multiple valves are measured by setting the ELECTRODE SELECTOR to A1 or A2. With this switch to D1 or D2 the circuit is ready for rectifier or signal diode testing, with the CIRCUIT SELECTOR at TEST. The selection of load current is made by rotating the anode current control (also separately scaled in rectifier load current) to the appropriate position, valve goodness being immediately shown on the same coloured meter scale.

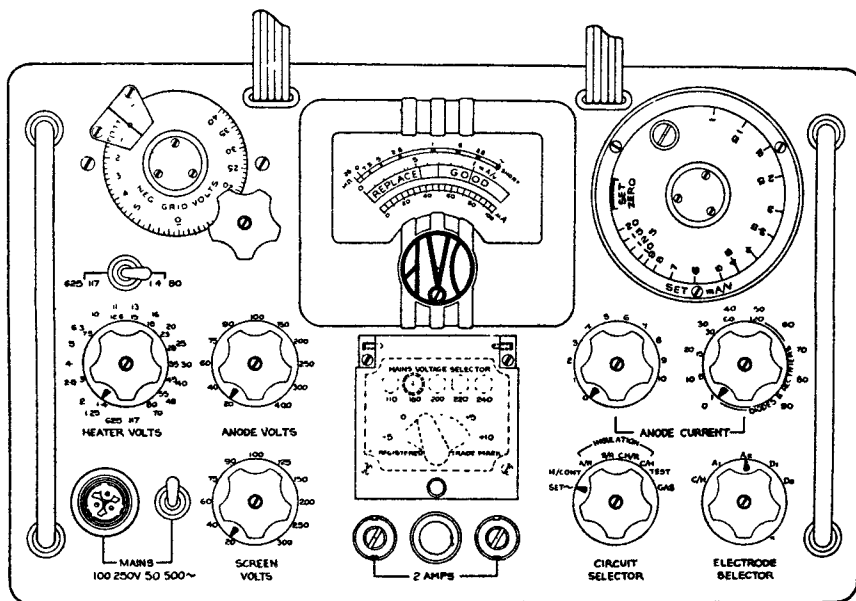


FIG. 5.


19. The rotary control SET mA/V is of the spring return type, and once a test has been made, automatically returns to its start position at which point the measuring circuit is shunted to a safety condition. Thus if a subsequent test is carelessly attempted with circuit wrongly set or if for instance a "gassy" valve is tested, this will be shown up before the circuit is put in a sensitive condition for mutual conductance testing and no damage will result to the instrument.

20. The final position of the CIRCUIT SELECTOR (marked GAS) places the meter M, shunted as a microammeter, in series with a resistor in the grid circuit of the valve being tested and allows the direct measurement of grid current in  $\mu$ A.

21. Further examination of figure 3 will show the inclusion of a safety relay with windings RL2 and RL3 in the screen and anode circuits respectively. Overloads (due to conditions of valve failure or misuse) associated with either or both of these circuits will trip the relay. This connects a high resistance lamp in series with the transformer primary windings, assisted by a hold off winding RL1 at the same time making a red warning light visible through the meter scale. This places the whole instrument in a safety condition. Normal working cannot be restored until the instrument has been switched off, the fault removed, and the instrument switched on again.

### The Valve Holder Panel

22. The valve holder panel by means of which the valve is connected to the test circuit comprises 22 valve bases covering all valves likely to be encountered in normal use, including disc seal and wire ended valves. The holders are wired with their corresponding sockets according to standard numbering, in parallel.

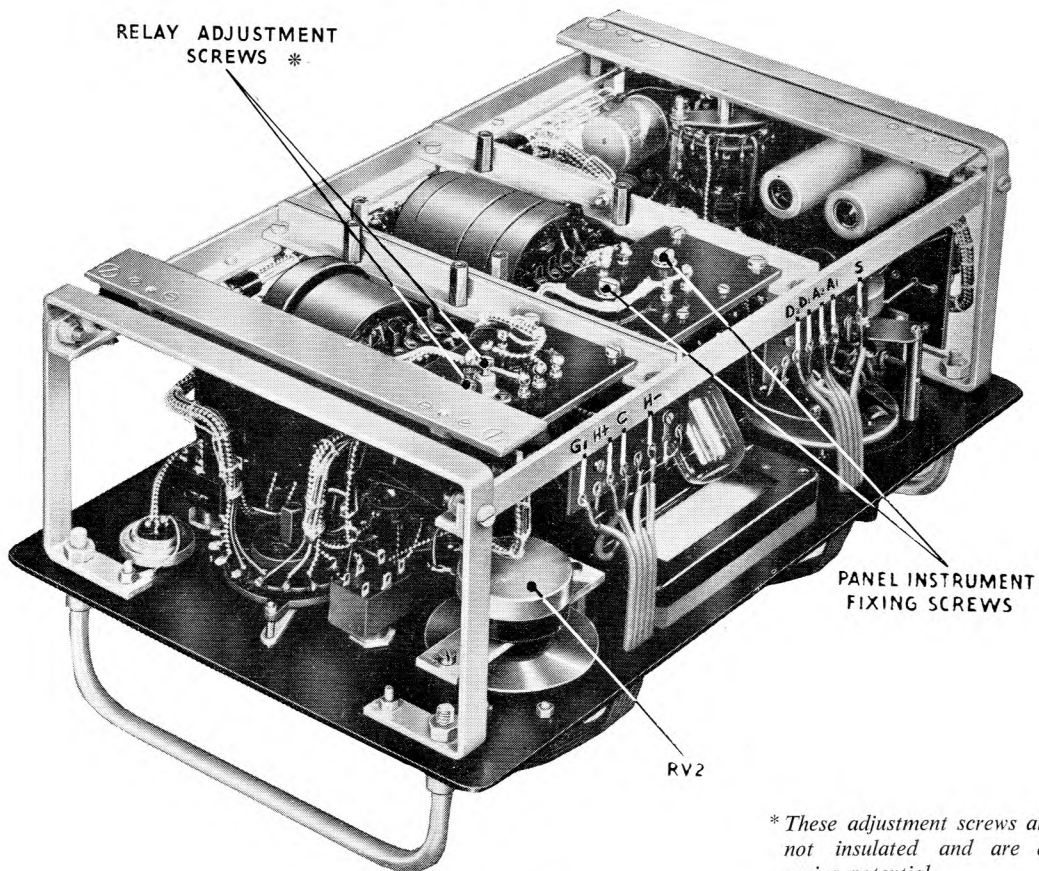

\* These adjustment screws are not insulated and are at mains potential.

FIG. 6.  
INSTRUMENT CHASSIS.

23. The wire connection loops thus formed are connected to the wiper rotors of the multi-way selector switch. Associated with these rotors are ten stators; nine of which are each connected to an electrode test circuit, the tenth one being open circuited. The rotors are in the form of edge operated rollers each having the nine electrode denominations marked in symbols round its periphery, the operative selection appearing in a window. Thus any valve holder with pins up to nine, can be set up to any electrode combination, the open circuit connection serving for valves with internally connected pins.

24. The problem of self oscillation that can occur with high slope valves at random high frequency, due to the inter-valve holder wiring, has been virtually eliminated by wiring the panel in connection loops of approximately similar length and configuration, so that a valve would tend to oscillate at a frequency dependent on the line thus formed. These wiring loops are then closed on themselves via a connector loaded to give high loss, and thus lower the Q of the line, so that oscillation is virtually impossible.

25. A handbook is provided with a line of data for each valve likely to be encountered giving, wherever possible, the mutual conductance and operating voltages, at the standard test point on the characteristics recommended in the Electronic Valve Specification. The data given comprises the pin combinations in the order of their standard numbering and in the form in which they appear in the roller selector switch window; top cap or side contact connection if any; heater volts; anode volts; screen volts; negative grid volts; operating anode current and mutual conductance (or load current in the case of a rectifier). Where multiple electrode assemblies are concerned test figures for each assembly are given. In case a valve is encountered that does not appear in the handbook, the base connections and manufacturer's or other recommended test data can be directly set up on the controls without any calculation or complexity.

---

#### KEY TO FIGURE 7

1. Roller Selector Switch.
2. Disc Seal Valve Holders.
3. Top Cap Connector Panel.
4. Set mA/V Control.
5. Anode Current Controls.
6. Electrode Selector.
7. Circuit Selector.
8. Mains Voltage Selector Coarse Adjustment.
9. Mains Voltage Selector Fine Adjustment.
10. Indicator Lamp.
11. Fuses.
12. Screen Voltage Switch.
13. Mains on/off Switch.
14. AC Mains Input Socket.
15. Anode Voltage Switch.
16. Heater Voltage Switches.
17. Negative Grid Volts Control.
18. Panel Indicating Meter.
19. Anode Links.
20. Special Flying Lead Valve Holder.



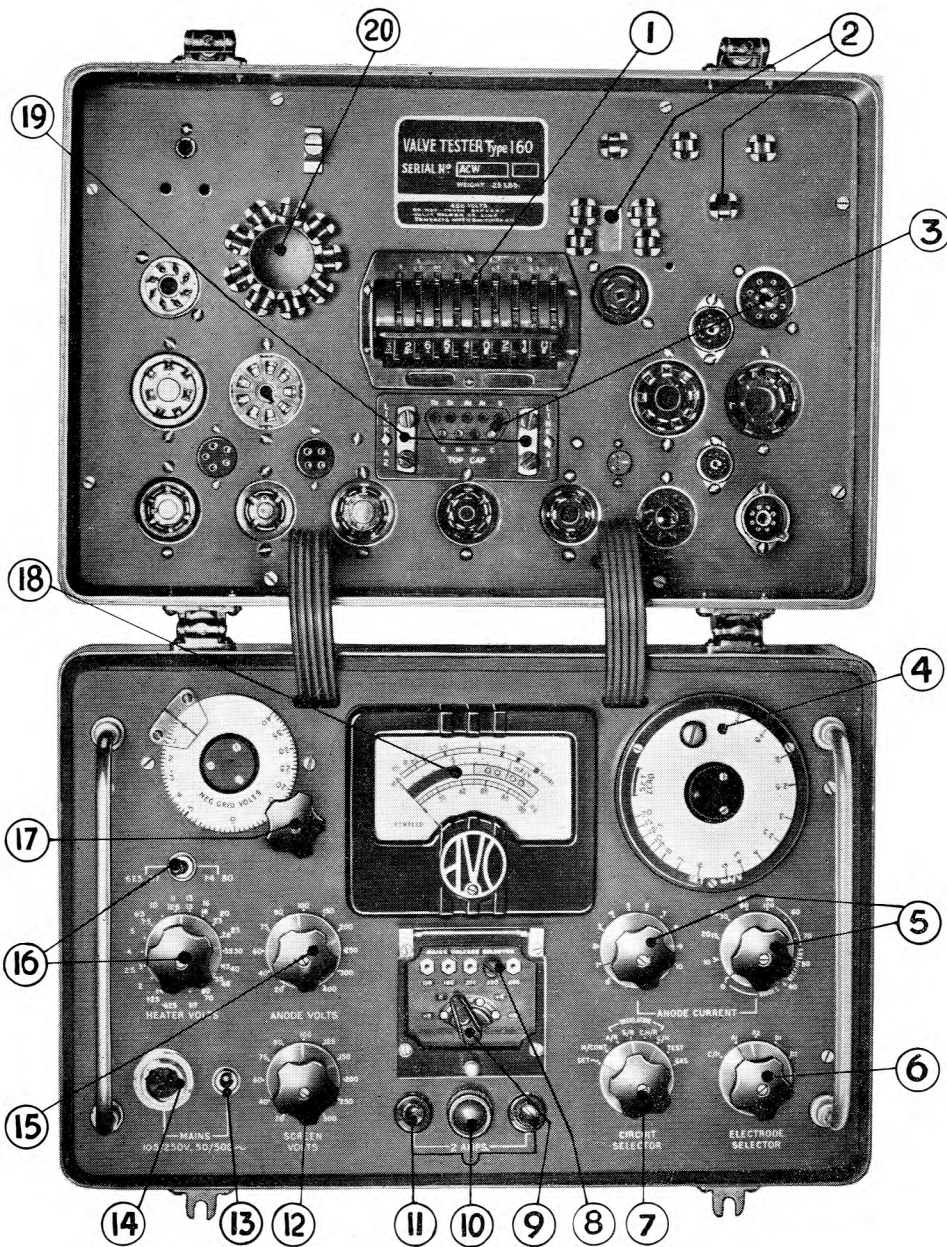



FIG. 7 THE LAYOUT OF THE INSTRUMENT

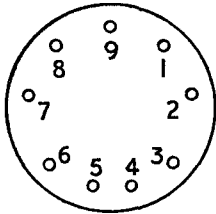


**BRITISH NINE PIN (B9)**

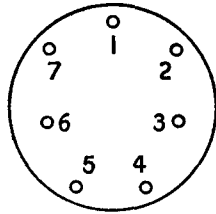


**BRITISH SEVEN PIN (B7)**

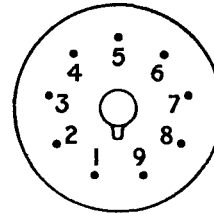


**B9G**

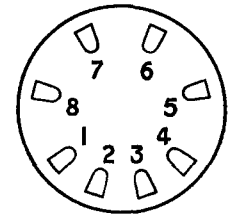


**'P' TYPE BASE (85C)**

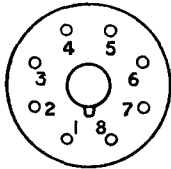


**INTERNATIONAL OCTAL (A08)**

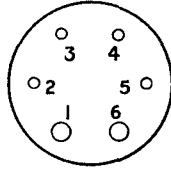


**AMERICAN SIX PIN (UX6)**

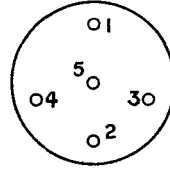


**BRITISH 4/5 PIN (B5&B4)**

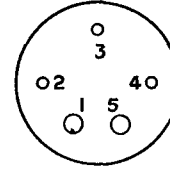


**AMERICAN FIVE PIN (UX5)**

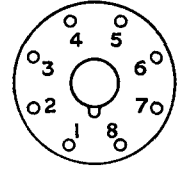


**MAZDA OCTAL (M08)**

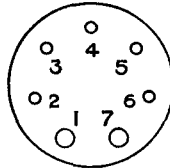


**AMERICAN SMALL SEVEN PIN (SM7)**

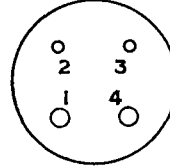


**AMERICAN FOUR PIN (UX4)**

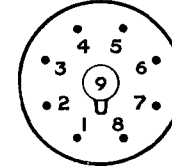


**AMERICAN OCTAL (B8B or B8G)**

 


**SUB MINIATURE 8 PIN (B8D)**

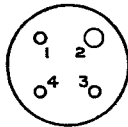


**HIVAC FOUR PIN (SM4)**

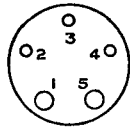


**HIVAC FIVE PIN (SM5)**

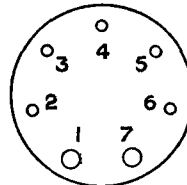

**AMERICAN SEVEN PIN (UX7)**

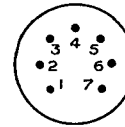

**B7G**

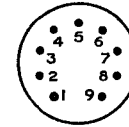


**B9A**



**B3G**

DIAGRAM OF PIN CONNECTIONS FOR  
STANDARD VALVE HOLDERS

**FIG. 8**

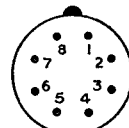

**B8A**

(Viewed from underside of Valve Holder)

## General Construction

26. The instrument is designed in suitcase form for portability and ease of stowage. It is of small size and constructed to comply with the requirements of the U.K. Government Climatic Tests Specification K.114. When closed it is completely shower-proof. All components likely to require replacement or adjustment in service are conveniently located on sub-assembly boards on the outer framework of the assembly, and are immediately to hand on removing the case, whilst the open framework construction used reduces weight to a minimum and ensures a maximum of accessibility.

## Mains Supply

27. Special attention to design details has rendered the instrument suitable for operation on AC mains from 50—500 c/s over the following voltage ranges:—105—120V, 175—250V.

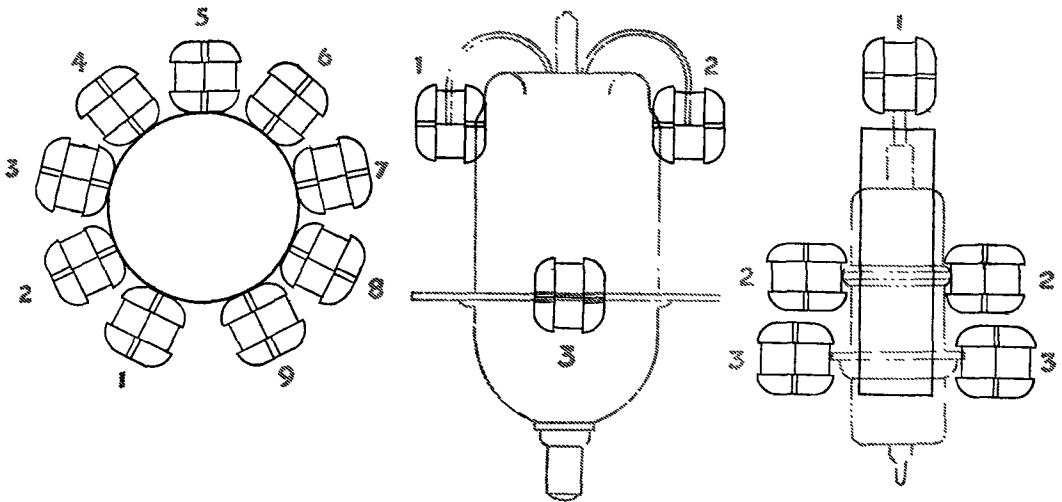


FIG. 9.

DIAGRAM OF CONNECTIONS FOR SPECIAL VALVE HOLDERS.

*(showing pin connections viewed from above)*



FIG. 10.

VALVE HOLDER PANEL

## KEY TO FIGURE 10

### Valve Holders

1. Flying lead.
2. Disc seal.
3. British four and five pin (B4 or B5)
4. American loctal (B8B or B8G).
5. Miniature nine pin (noval or B9A).
6. British nine pin (B9).
7. Philips " P " type (8SC).
8. Miniature seven pin (B7G).
9. Philips eight pin locking (B8A).
10. Mazda Octal (M08).
11. Miniature three pin (B3G).
12. American five pin (UX5).
13. American Small seven pin (Sm7).
14. American Medium seven pin (UX7)
15. American four pin (UX4).
16. Hivac Deaf Aid four pin (Sm.4).
17. American six pin (UX6).
18. Hivac Deaf Aid five pin (Sm.5).
19. British seven pin (B7).
20. All Glass nine pin (B9G).
21. International Octal (A08).

## CHAPTER 2

### THE VALVE PANEL AND CONTROL UNIT

#### The Valve Panel and Selector Switch

1. The Valve Panel comprises 22 Valve Holders of the following types:—English 4/5 pin, English 7 pin, English 9 pin, Philips 8 pin side contact, B7G, B8A, B8G (American Loctal), B9G, B9A, Mazda Octal, International Octal, B3G, Hivac 4 pin miniature, Hivac 5 pin miniature, American 4 pin UX, American 5 pin UX, American 6 pin UX, American small 7 pin UX, American medium 7 pin UX, two disc seal and a special flying lead Valve Holders. (See Figs. 8 and 9 for diagram of standard pin connections.)

2. In the case of the flying lead and disc seal valves (see Fig. 9), the pin numbering sequence corresponding to the set-up Data is printed on the panel adjacent to the appropriate socket. It is assumed that all flying lead valves will be inserted into the appropriate Valve Holder with the envelope pointing downwards, and the wire connections uppermost (corresponding to the normal method of designating valve pin numbers looking into the valve pins).

3. All Valve Holders are wired with their corresponding pins in parallel i.e., all pins numbered 1 are wired together, all pins numbered 2 and so on. This wiring combination is associated with the well-known “AVO” MULTI-WAY ROLLER SELECTOR SWITCH which enables any one of the nine standard pin numbers to be connected to any one of the electrode test circuits in the instrument, thus enabling any electrode combination to be set up for all Valve Holders.

4. It will be seen (Fig. 10) that the Selector Switch comprises nine thumb rollers, numbered from left to right 1—9. This numbering appears on the moulded escutcheon immediately behind the rollers, and corresponds to the valve pins in the order of their standard pin numbering. Thus valves with any number of pin connections up to nine, can be accommodated. To cater for Top Cap and other external valve connections, a socket panel has been provided with nine sockets marked D1, D2, A2, A1, S, G, H+, H-, & C. A short lead is provided which is fitted with a plug for insertion into the panel, whilst the remote end of the lead is fitted with a universal connection clip to cater for all types of external valve connections. The socket panel is fitted with two links marked A2 and A1, to which reference is made in chapter 3, para 44.

5. Rotation of the rollers of the Selector Switch will reveal that each roller can be set in any one of ten positions, the appropriate setting being indicated in the window opening at the front of the escutcheon. The ten positions of each roller are marked as under:—

|   |    |    |   |   |   |    |    |    |   |
|---|----|----|---|---|---|----|----|----|---|
| 1 | 2  | 3  | 4 | 5 | 6 | 7  | 8  | 9  | 0 |
| C | H— | H+ | G | S | A | A2 | D1 | D2 | — |

6. The numbers are provided in order that the switch can be rapidly set up from the code numbers given in the Valve Data Handbook, the corresponding electrode denominations being shown by the letter which appears in the escutcheon window immediately below the number thus:—

- $\overset{1}{C}$  Corresponds to Cathode, or any other earthy electrode normally connected to cathode e.g. G3.
  - $\overset{2}{H-}$  Corresponds to Heater, normally earthy, or connected to negative L.T. in the case of a battery valve.
  - $\overset{3}{H+}$  Corresponds to the other Heater connections or centre tap.
  - $\overset{4}{G}$  Corresponds to Control Grid.
  - $\overset{5}{S}$  Corresponds to Screen Grid, or G2.
  - $\overset{6}{A}$  Corresponds to the normal Anode of single or multiple valves. In the case of an oscillator mixer valve, "A" represents the oscillator Anode.
  - $\overset{7}{A_2}$  Corresponds to the second Anode of double valves, and in the case of oscillator mixer valves, the mixer Anode.
  - $\overset{8}{D_1}$  Corresponds to the first Diode Anode of half and full wave Signal Diode and Rectifier valves, Diode and Rectifier/Amplifier combinations.
  - $\overset{9}{D_2}$  Corresponds to the second Diode Anode of Signal Diode and Rectifier valves, Diode and Rectifier/Amplifier combinations.
  - $\overset{0}{-}$  Corresponds to a dis-connected valve pin, or to a pin on which an internal electrode is anchored. Such pins are marked "I.C." in the E.V.S. Handbook and Manufacturer's literature. This switch position leaves the particular valve pin dis-connected from any circuit.
- \*Some instruments will be found to be fitted with rollers marked " $\overset{0}{E}$ " which can be regarded as being synonymous with  $\overset{0}{-}$ .

### Procedure for Setting up Valve Base Connections

7. The procedure for setting up a valve ready for test is as follows:—From some suitable source, i.e. the "AVO" Valve Data Handbook BR1771(13)B, Valve Manufacturer's Data Leaflet, or any other Manual of Valve Data, determine the pin basing connections for the valve. Rotate the roller of the SELECTOR SWITCH until the code number or electrode letter combination appears in the window, reading from left to right in accordance with the standard pin numbering sequence (see Fig. 8). When a valve has less than 9 pins, the free rollers on the right of the set up combination correspond to non-existent valve electrodes, and should be set at  $\overset{0}{-}$ . Insert the valve into its appropriate holder (following the sequence laid down in the general procedure for testing a valve, commencing chapter 3, para 1, and by means of the lead provided, connect any top cap or side connection on the valve to its appropriate socket on the socket panel. Note that the Loctal Valve Holder which has only 8 normal electrodes, has its centre spigot connected to the ninth roller (corresponding to Pin No. 9) to accommodate valves which have a connection made to this spigot.

8. The accompanying examples show how to correlate the pin basing data and the equivalent code number for various valves in common use.

*Valve Type*


*Set up Number*

*Base Diagram*

CV1037

(Osram MH4) indirectly heated triode.  
British 5-pin base.


|   |   |    |    |   |   |   |   |   |
|---|---|----|----|---|---|---|---|---|
| 6 | 4 | 2  | 3  | 1 | 0 | 0 | 0 | 0 |
| A | G | H— | H+ | C | — | — | — | — |

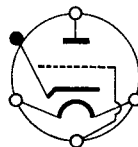

CV1268

(Osram U50) full wave rectifier directly heated.  
International Octal Base.


|   |    |   |    |   |    |   |    |   |
|---|----|---|----|---|----|---|----|---|
| 0 | 2  | 0 | 8  | 0 | 9  | 0 | 3  | 0 |
| — | H— | — | D1 | — | D2 | — | H+ | — |

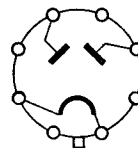

CV3638

(Mullard Pen A4) indirectly heated output pentode.  
British 7-pin base.

|   |   |   |    |    |   |   |   |   |
|---|---|---|----|----|---|---|---|---|
| 0 | 4 | 5 | 2  | 3  | 1 | 6 | 0 | 0 |
| — | G | S | H— | H+ | C | A | — | — |

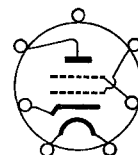


CV1945

(Brimar 6K8) indirectly heated frequency changer.  
International Octal Base.

|   |    |    |   |   |   |    |   |   |
|---|----|----|---|---|---|----|---|---|
| 0 | 2  | 7  | 5 | 4 | 6 | 3  | 1 | 0 |
| — | H— | A2 | S | G | A | H+ | C | — |

Top Cap G1.

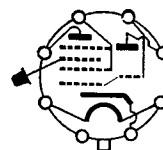


CV3726

(MullardTDD2A) battery double diode triode.  
British 5-pin base.

|   |    |    |    |    |   |   |   |   |
|---|----|----|----|----|---|---|---|---|
| 6 | 8  | 2  | 3  | 9  | 0 | 0 | 0 | 0 |
| A | D1 | H— | H+ | D2 | — | — | — | — |


Top Cap G1.

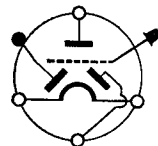

CV1091

(Mullard EF50) indirectly heated HF pentode.  
B9G base.

|    |   |   |   |   |   |   |   |    |
|----|---|---|---|---|---|---|---|----|
| 2  | 5 | 6 | 1 | 0 | 1 | 4 | 0 | 3  |
| H— | S | A | C | — | C | G | — | H+ |

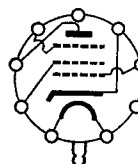

**Note**

9. When the SELECTOR SWITCH setting is derived from manufacturers' Data, or the E.V.S. Register of electronic valves and a pin connection is shown as "I.C." (internally connected), the roller appertaining to this pin should be set to 0. Where a pin connection is an electrode normally connected to cathode e.g., G3, the roller corresponding to this pin should be set to  $\frac{1}{C}$ .

## Provision for New Valve Bases

10. Although the Valve Panel caters for all valves in common use, the possibility has not been overlooked that new valves and corresponding new bases may appear on the market from time to time. Should such a situation arise, plug-in adaptors will become available commercially which will enable the new valve to be plugged into an existing socket on the Valve Panel. Blank adaptors are already available to accommodate non-standard bases not incorporated on the existing Valve Panel.

## The Control Unit and its Function

11. With the exception of the Roller Selector Switch and other features incorporated on the Valve Panel, all the controls are situated on the Main Panel of the instrument. By the manipulation of these controls, and the use of the Valve Panel, the following tests can be undertaken:—

- (1) Heater continuity.
- (2) The measurement of insulation resistance between electrodes with the valve cold.
- (3) The measurement of insulation resistance between Heater/Cathode to all other electrodes strapped together, with the valve heater at operating temperature.
- (4) The direct indication of cathode to heater insulation with the valve heater hot.
- (5) The direct indication of valve “goodness” on a coloured “good/replace” scale, for a complete range of applied H.T. and bias voltages.
- (6) The direct indication of anode current and mutual conductance (mA/V) at and pre-determined combination of H.T. and bias voltages.
- (7) The measurement of control grid current on a scale directly calibrated in  $\mu\text{A}$ .
- (8) The testing of half and full wave rectifiers under reservoir capacitor conditions with a range of DC loads which can be selected by means of a switch.
- (9) The testing of signal diodes with suitable DC loads which can be selected by the operator.
- (10) The testing of the separate sections of multiple valves, the non-operative section of the valve under test being maintained at reasonable working electrode voltages.
- (11) The ability to derive data from which the characteristic curves  $I_a/V_{g_1}$ ,  $I_a/V_a$ ,  $V_{g_1}/V_{g_2}$ , etc., can be drawn with a range of applied electrode voltages corresponding to DC operating conditions.
- (12) The testing of valves with suitable loads included in the anode circuit, together with the ability to read the required electrode current on a separate external meter. The instrument is, therefore, suitable for making tests on non-standard and specialised types of valves, not catered for in normal circuit arrangements.

The function of the various controls is as follows:—

## The Mains Voltage Selector

12. The instrument has been designed to operate from supplies of 50—500 c/s over the following voltage ranges:—105—120V, 175—190V, 195—210V, 215—230V, 235—250V.

13. Access to the Voltage Selector Panel can be gained by turning a thumb screw and lifting the transparent cover. The Coarse Voltage Selector is marked 110, 180, 200, 220 and 240, whilst a Fine Voltage Selector Arm is marked - 5, 0, + 5, + 10. The setting on this Fine Voltage Selector must be added to the voltage marked under the socket into which

the selector pin has been inserted. For example, if it is desired to operate the instrument on a 230V AC supply, the Coarse Selector Pin should be screwed into the 220V socket and the Fine Selector Arm turned to its + 10 position.

**14.** The Fine Voltage Selector also allows minor adjustments to be made to the input tappings on the mains transformer to compensate for voltage variations of the mains. The instrument should be switched off whilst adjustments are made to the *Coarse MAINS VOLTAGE SELECTOR*.

### **The Circuit Selector**

**15.** This is an eight position switch which determines the type of test to be undertaken on the instrument. All the necessary internal circuit connections are made automatically to satisfy the test conditions required, whilst internal test circuits unnecessary to the particular test in hand are removed from the valve.

**16.** The switch position SET  $\sim$  enables final mains voltage adjustment to be made. At the H/CONT position, the meter indicates heater continuity. At the positions A/R and S/R, and used in conjunction with the ELECTRODE SELECTOR Switch, it is possible to check leakage between electrodes with the valve heater cold.

**17.** At the position CH/R, again using the ELECTRODE SELECTOR Switch, the valve is automatically checked for electrode leakage between cathode and heater strapped, and all other electrodes with heater voltage applied.

**18.** At the position C/H, the valve is automatically checked for cathode to heater insulation with heater voltage applied. For this test, the ELECTRODE SELECTOR is set to C/H.

**19.** With the CIRCUIT SELECTOR switch set to TEST, and in conjunction with the ELECTRODE SELECTOR, ANODE CURRENT, and other relevant controls, the valve is tested for its normal characteristics, the majority of the information being obtained from the setting of controls, the meter being used as a form of null indicator.

**20.** At the position GAS, the meter is connected in series with the control grid connection, and directly indicates gas current in  $\mu\text{A}$ .

### **The Electrode Selector**

**21.** This switch, used in conjunction with the CIRCUIT SELECTOR, enables the meter to be associated with the anode circuit under test, with the exception of test position C/H. This latter setting is used only in conjunction with the CIRCUIT SELECTOR set to C/H for the measurement of cathode/heater insulation. Triodes, pentodes and multiple grid valves are checked with the ELECTRODE SELECTOR set to  $A_1$  or  $A_2$ , whilst diodes and rectifiers are checked at positions  $D_1$  and  $D_2$ .

### **The Heater Voltage Switches**

**22.** Heater voltages are selected by means of two switches, the first being a simple toggle switch marked  $\cdot 625-117$ , and  $1\cdot 4-80$ , the second being an 18 way switch surrounded by two sets of calibration figures. The outer set of voltages on the latter can be selected when the toggle switch is in its left-hand position ( $\cdot 625-117$ ), whilst the inner set of voltages can be selected when the toggle switch is in its right-hand position ( $1\cdot 4-80$ ). Table 1 gives details of the 32 available heater voltages.

TABLE I

| OUTER RING<br>Nominal heater volts appearing at valve base with toggle switch set to position<br>·625 — 117 | INNER RING<br>Nominal heater volts appearing at valve base with toggle switch set to position<br>1·4 — 80 |
|---|---|
| ·625  | 1·4   |
| 1·25  | 3   |
| 2   | 4·5   |
| 2·5   | 5·7   |
| 4   | 7·5   |
| 5   | 12·6  |
| 6·3   | 15  |
| 10  | 18  |
| 11  | 23  |
| 13  | 28  |
| 16  | 35  |
| 20  | 45  |
| 25  | 55  |
| 30  | 80  |
| 40  |   |
| 48  |   |
| 70  |   |
| 117   |   |

### The Anode and Screen Voltage Switches

23. These switches enable the requisite electrode voltages to be applied to screen and anodes of valves for the purpose of carrying out mutual characteristic measurements. They are calibrated in the equivalent DC voltage settings and, therefore, no account need be taken of the actual value of AC voltage which appears at the electrodes of the valve, for as already explained in Chapter 1, the actual voltage will differ from the equivalent DC value marked at the switch position.

### The Anode Current Controls

24. This is a dual control comprising two knobs, the first being continuously variable and calibrated from 0—10mA, the second having an inner and outer set of calibration figures. Only the outer set of figures marked in steps of 10mA from 0—90mA apply when anode current is being measured. These controls enable the expected anode current from the valve under test to be set upon the instrument and also serve as a means of final adjustment prior to making slope measurement (mA/V) tests. These controls do, in effect, back off the anode current passed by the valve, and to prevent overloading they should be set to the expected figure before the CIRCUIT SELECTOR switch is set to the position TEST.

25. When checking diodes and rectifiers, the inner range of figures around the right hand switch become operative, enabling the operator to select the required load, which is normally 1mA per anode in the case of signal diodes and from 5—120mA per anode for high vacuum power rectifiers.

### **The Negative Grid Volts Control**

26. This is a continuously variable control calibrated 0—40 and marked NEG GRID VOLTS, which enables the initial negative bias at which a test is made to be set at any value between 0 and minus 40 volts.

### **The Set mA/V Control**

27. The mA/V control marked 1—20mA/V enables the rapid checking of the operative “goodness” of a valve, on a “replace/good” scale on the moving coil indicator, or alternatively, the direct measurement of mutual conductance in mA/V.

**OPERATING  
INSTRUCTIONS**

## CHAPTER 3

### OPERATING INSTRUCTIONS

&

### GENERAL PROCEDURE FOR TESTING A VALVE

#### The connection of the instrument to a supply voltage

1. Remove the mains supply lead from its storage position in the lid of the instrument, and connect the cable termination to the socket provided on the control panel. Ascertain the voltage of the mains supply (which must, of course, be AC 50—500c/s) and set the MAINS VOLTAGE SELECTOR panel as described in Chapter 2. Connect the mains lead of the instrument to the power supply, ensuring that the red wire is connected to “line”, the black or blue wire to “neutral” and the green wire to “earth”. Set the MAINS Switch on the panel to its “ON” position, and observe that the panel indicator lamp is illuminated. The valve to be tested should *NOT* be inserted at this stage.

#### Final setting of Mains Voltage Selector Panel

2. Having allowed a few moments for the instrument to warm up, set the CIRCUIT SELECTOR Switch to the position SET  $\sim$ . Set the fine voltage adjustment control so that the meter needle lies in the black zone. If this cannot be done, the coarse control will require adjustment, and should be moved to the next higher tapping if the needle is too far to the right of the mains adjustment zone, and in a similar manner, it should be moved to the next lower tapping if the meter needle is to the left of the mains setting zone. Once the mains voltage tapping has been correctly set, provided that extensive mains fluctuations do not occur, test voltages are automatically correct throughout the instrument.

#### Insulation checks with the valve cold

3. (1) The Valve Data Handbook supplied with the instrument, or the Valve Manufacturer's Data, should now be consulted, and the ROLLER SELECTOR Switch set up as explained in Chapter 2, para 8.

(2) Set the HEATER VOLTAGE Switches to the correct value for the valve under test, and insert the valve into its appropriate holder, making any necessary connection to top or side caps.

(3) Set the CIRCUIT SELECTOR Switch to H/CONT, and the ELECTRODE SELECTOR Switch at C/H. The meter should now indicate a “short”, thus indicating heater continuity.

(4) Set the CIRCUIT SELECTOR Switch at A/R and S/R in turn, using each of these settings in conjunction with successive settings of the ELECTRODE SELECTOR Switch at A<sub>1</sub>, A<sub>2</sub>, D<sub>1</sub>, and D<sub>2</sub>. The meter will now indicate any insulation breakdown between electrodes.

4. (5) Table 2 sets out the manner in which insulation checks are made.

TABLE 2

| Circuit Selector Switch Position. | Electrode Selector Switch Position. | Insulation Check.  |
|-----------------------------------|-------------------------------------|--|
| A/R                               | A <sub>1</sub>                      | Checks insulation anode 1 to screen, filament, cathode, anode 2 and grid.        |
| A/R                               | A <sub>2</sub>                      | Checks insulation anode 2 to screen, filament, cathode, anode 1 and grid.        |
| A/R                               | D <sub>1</sub>                      | Checks insulation D <sub>1</sub> to screen, filament, cathode, anode 1 and grid. |
| A/R                               | D <sub>2</sub>                      | Checks insulation D <sub>2</sub> to screen, filament, cathode, anode 2 and grid. |
| S/R                               | A <sub>1</sub>                      | Checks insulation screen, to filament, cathode and grid.                         |

5. Study of the table set out above will show that all normally expected insulation breakdowns are covered, with the exception of cathode to grid, which case is covered in a later check. Thus, a reading on the meter of  $1M\Omega$  when the SELECTOR Switch is set to A/R, and the ELECTRODE SELECTOR switch is set to A<sub>1</sub> can only indicate a breakdown from anode 1 to grid, provided that breakdowns are not indicated in any other insulation test with heater either hot or cold. It is, therefore, apparent that it is possible to deduce between which electrodes a breakdown is occurring, although this information is normally never required, for in general, any appreciable inter-electrode breakdown will render the valve useless.

#### Insulation checks with the valve hot

6. All the tests referred to in para 4 were carried out with the valve heater cold. The CIRCUIT SELECTOR Switch should now be set to CH/R, and a short time allowed to elapse to enable the valve to reach working temperature. With the ELECTRODE SELECTOR Switch set to A<sub>1</sub>, D<sub>1</sub> and D<sub>2</sub> in turn, any deflection will denote in  $M\Omega$  the amount of insulation breakdown which occurs with cathode and heater strapped together to any other electrode.

7. Table 3 sets out below the manner in which these insulation checks are made.

TABLE 3

| Circuit Selector Switch Position. | Electrode Selector Switch Position. | Insulation Check.   |
|-----------------------------------|-------------------------------------|---|
| CH/R                              | A <sub>1</sub>                      | Checks insulation cathode and heater to A <sub>1</sub> , A <sub>2</sub> , G <sub>1</sub> , S. |
| CH/R                              | D <sub>1</sub>                      | Checks insulation cathode and heater to D <sub>1</sub> .                                      |
| CH/R                              | D <sub>2</sub>                      | Checks insulation cathode heater to D <sub>2</sub> .  |

### **Cathode to Heater insulation check**

8. Turn the CIRCUIT SELECTOR Switch to C/H, and the ELECTRODE SELECTOR Switch to C/H. Any insulation breakdown which occurs between heater (hot) and the cathode will be directly indicated on the insulation resistance scale of the meter. It is not possible to state a rejection figure in  $M\Omega$  for a valve under test, for such a fault will be of considerable importance in some circuits, whilst in a few cases its presence has virtually no consequence at all. The instrument is capable of giving the insulation between cathode and heater, and the acceptance or rejection of the valve can only be determined when the operator has details of the circuit in which the valve is to be used. In those cases where these details are not known, it is always better to reject a valve having an insulation resistance less than  $10M\Omega$ . It will be appreciated that there are many circuits in which an appreciable potential exists between heater and cathode, DC amplifiers, etc., and the presence of heater to cathode insulation breakdown, even of the order of many  $M\Omega$  can often give rise to quite serious trouble. Heater to cathode insulation breakdown either permanent or intermittent can also give rise to noise in valve amplifier circuits.

### **Determination of Valve condition from Static Characteristic Data**

9. Normally, a valve, unless it is a diode or rectifier, is checked by a comparison of its actual mutual conductance with the rated figure. The broad procedure for obtaining this figure consist of:—

- (i) Applying to the valve the recommended electrode voltages.
- (ii) Backing off to zero the standing anode current thus produced.
- (iii) Applying a small incremental signal to the grid of the valve.
- (iv) Assessing the mutual conductance and consequently the “goodness” of the valve from the resultant rise in anode current.

10. Provision is made to test for mutual conductance under two conditions:—

- (i) Where the measurement is made at a predetermined fixed value of grid bias, the resulting anode current being balanced out.
- (ii) Where the measurement is made at the predetermined optimum value of anode current, the grid bias being adjusted to give a balance.

11. In either of these cases, the determination of “goodness” can be made by:—

- (a) A comparison of the mutual conductance of the valve on a percentage basis with its rated figure, the comparative “goodness” factor being indicated on a coloured “good/replace” scale.
- (b) A direct numerical determination of the valve’s mutual conductance in  $mA/V$  which can then be compared with the rated figure.

12. In certain circumstances, where for example the valve is used as an oscillator or output valve working at peak emission, more useful information than is given by the usual mutual conductance figure can be gained from the anode current obtained for a given set of electrode voltages. Such conditions are catered for by calibrating the “backing off” controls in terms of anode current (milliamperes). Thus, when the standing anode current has been “backed off” to zero as shown by the meter indication (not calibrated in anode current), the reading of the backing off controls gives the anode current for the valve under test, at a particular combination of electrode voltages. This figure can be compared with expected anode current for the conditions employed to determine the valve’s suitability for the function it has to perform.

13. It is obvious that this arrangement also enables complete valve characteristics of anode current related to electrode voltages to be plotted, it merely being necessary to record the anode current obtained at a series of electrode voltage settings (either anode, screen or grid), and plotting the mutual characteristics  $I_a/V_g$ ,  $I_a/V_a$  etc., from the data thus obtained.

14. The detailed instructions for making the measurement outlined above, having completed the inter-electrode insulation checks, are as follows:—

15. Set ANODE VOLTS, SCREEN VOLTS, NEG GRID VOLTS and ANODE CURRENT controls to the value indicated in Valve Data., then set ELECTRODE SELECTOR to A1 and CIRCUIT SELECTOR to TEST.

Note 1

*Should the protective relay operate, switch off and check for incorrect setting of the ROLLER SELECTOR SWITCH or electrode voltages. If these are correct and the relay continues to “buzz” when the instrument is switched on again, the valve is probably “soft” (gassy), and the test should proceed no further. If upon removing the offending valve, the relay continues to operate, the instrument should be switched off. When switched on again, the instrument should function normally.*

**To check relative goodness of Valve in conjunction with Coloured Comparison Scale**

**16. (a) Using recommended anode current**

- (i) Do not alter ANODE CURRENT controls, but adjust NEG GRID VOLTS control until meter is balanced to zero.
- (ii) *Slowly* rotate SET mA/V control to SET ZERO position and make any final adjustment to zero, using fine ANODE CURRENT control. (See Note 3.)
- (iii) Continue rotation of SET mA/V control to expected value of mA/V (meter needle should rise).
- (iv) The comparative “goodness” of the valve will now be shown by the position of meter needle on coloured scale. This scale is divided into three zones, and all valves coming within the green portion can be regarded as satisfactory. Readings in the intermediate zone between the red and green sections are not entirely satisfactory, although the valve may be capable of working in some circuits at lowered efficiency, whilst readings in the red zone indicate that the valve should be rejected or replaced.

**17. (b) Using recommended negative grid voltage**

- (i) Do not alter NEG GRID VOLTS control, but adjust ANODE CURRENT controls until meter is balanced to zero.
- (ii) *Slowly* rotate SET mA/V control to SET ZERO position and make any final adjustment to zero, using fine ANODE CURRENT control. (See Note 3.)
- (iii) Continue rotation of SET mA/V control to expected value of mA/V (meter needle should rise).
- (iv) The comparative “goodness” of the valve will now be shown by the position of meter needle on coloured scale. This scale is divided into three zones, and all valves coming within the green portion can be regarded as satisfactory. Readings in the intermediate zone between the red and green sections denote

that the valve is not entirely satisfactory, although it may be capable of working in some circuits at lowered efficiency, whilst readings in the red zone indicate that the valve should be rejected or replaced.

*Note 2*

*Valves having a slope of less than 1mA/V cannot be checked on the good/replace scale, and must be checked in the manner set out in para 20.*

**To check Valve by direct reading of Mutual Conductance (mA/V)**

**18. (a) Using recommended anode current**

- (i) Do not alter ANODE CURRENT controls, but adjust NEG GRID VOLTS control until meter is balanced to zero.
- (ii) *Slowly* rotate SET mA/V control to SET ZERO position and make any final adjustment to zero, using fine ANODE CURRENT control. (See Note 3.)
- (iii) Continue rotation of SET mA/V control until meter needle reaches the calibration line in centre of "good" zone, marked "1mA/V."
- (iv) Read actual value of mutual conductance from SET mA/V dial. This figure can be compared with that given in Data Handbook.

**19. (b) Using recommended negative grid voltage**

- (i) Do not alter NEG GRID VOLTS control, but adjust ANODE CURRENT controls until meter is balanced to zero.
- (ii) *Slowly* rotate SET mA/V control to SET ZERO position and make any final adjustment to zero, using fine ANODE CURRENT control. (See Note 3.)
- (iii) Continue rotation of SET mA/V control until meter needle reaches the calibration line in centre of "good" zone marked "1mA/V."
- (iv) Read actual value of mutual conductance from SET mA/V dial. This figure can be compared with that given in the Data Handbook.

**To check Valves having a Mutual Conductance less than 1mA/V**

**20.** Since the SET mA/V dial is not calibrated below 1mA/V, it is not possible to check on the coloured comparison scale, valves having an expected mutual conductance less than 1mA/V. Such valves are checked by direct measurement of mutual conductance using the procedure set out in paragraphs 18 or 19, with the exception that the mA/V dial is rotated to the 1mA/V position and the actual value for mutual conductance (being less than 1mA/V) is read on the meter scale calibrated 0.1—1mA/V.

**21.** For valves with more than one electrode assembly, having been set up for any difference in electrode voltages, repeat above test with ELECTRODE SELECTOR at A<sub>2</sub>. (See also comments under Testing of Specific Valve Types.)

*Note 3*

*Certain valves require an exceptionally long period to reach working temperature, the symptoms being a continual rise of anode current when the SET mA/V dial is at the SET ZERO (more sensitive) position. Slope measurements should not be taken until a condition of stability has been reached.*

#### Note 4

When checking certain valves of the CV.138 type, back emission sometimes occurs between anode and the suppressor grid which is normally connected to cathode. This condition, which is caused by local overheating of the anode, would not affect the operation of the valve under normal circuit conditions, although it could give rise to doubt as to the "goodness" of the valve when checked on a valve testing instrument. The phenomenon shows itself as an apparent gradual fall in anode current as the valve heats up, and the only manner in which this effect can be overcome, is to lower the power dissipation of the valve by reducing the anode voltage. Note "E" in the "AVO" Valve Data Handbook relates to the above conditions, and a note appears against those valve types concerned, together with an alternative set of test data.

#### Note 5

In literature issued by American Valve Manufacturers, the term "transconductance" is used in place of "mutual conductance". Transconductance given in micromhos, divided by 1,000 gives mA/V.

$$\text{mA/V} = \frac{\text{Transconductance (Micromhos)}}{1,000}$$

### Measurement of Grid Current

22. The measurement of grid current at a desired set of electrode voltages may be made after having measured the mutual conductance of a valve. This measurement should not be made where an apparent fault in the valve has previously caused the protective relay to operate (possibly due to softness).

23. The CIRCUIT SELECTOR switch should be set to GAS, thus inserting the meter into the grid circuit of the valve, where it records grid current directly in  $\mu\text{A}$ . The meter is limited to read a maximum of  $100\mu\text{A}$ , but it is not possible to state the value at which a valve becomes useless due to the presence of gas. The point at which gas current reaches a value great enough to affect the successful employment of the valve depends very much upon the circuitry in conjunction with which it is to be employed, e.g. it is possible for appreciable grid current to flow in the secondary of an R.F. transformer connected between grid and earth, but if resistance/capacity coupling is used in the circuit, the same magnitude of grid current may produce appreciable voltage across the bias resistor, thus completely upsetting the normal functions of the circuit.

### Checking Power Rectifiers

24. The testing of rectifying valves should ideally be associated with the requirements of the circuit in which they are to operate. In most cases throughout the "AVO" Valve Data Handbook, the figure quoted denotes the standard emission per anode to be expected from the type of valve under test.

25. The procedure for testing a rectifying valve is exactly the same as that for a valve with one or more grids, to the end of the insulation checks.

26. From this point onwards, before setting the CIRCUIT SELECTOR to the position TEST, the right hand ANODE CURRENT control switch reading on the inner set of figures, should be set to the load current given for the valve in the Valve Data

Handbook. Set CIRCUIT SELECTOR to TEST and the ELECTRODE SELECTOR either to  $D_1$  in the case of a half wave rectifier, or  $D_1$  and  $D_2$  for a full wave rectifier.

27. Having correctly set up the controls as explained above, the “goodness factor” of the valve under test will be shown on the coloured “replace/good” scale of the meter.

28. The inner ring of figures on the ANODE CURRENT control relate to load currents and are marked “Diodes and Rectifiers”, the figures marked being the emission in mA expected per anode of the valve under test.

29. The setting of this control can either be determined from the tabulated data given, or can alternatively be related to the total current that a valve is required to deliver. Thus, on a piece of equipment where the total H.T. drain on the rectifier is 50mA, then a rectifier load setting of 60 will be an adequate test of the valve’s emissive state, assuming that it is a half wave rectifier. Alternatively, if the valve is a new one, the maker’s rating for maximum load current can be used as the basis for the setting of the ANODE CURRENT switch.

30. In the case of full wave rectifiers, each anode of the valve is rated independently, and the setting of the ANODE CURRENT control should indicate half the total value of the current which the valve would be expected to deliver in a full wave rectifier circuit, e.g. a valve rated at a maximum of 120mA would be tested with each anode at the 60 position on the ANODE CURRENT control. The load rating given in the Valve Data Handbook is the load per anode.

### Checking Signal Diodes

31. Signal Diodes are checked in exactly the same manner as rectifiers, except that the right-hand ANODE CURRENT control is always set to 1 or 5 according to the anode current figure given in the Data. (Where “AVO” Valve Data does not give a current figure for a diode, it is always checked with the right-hand ANODE CURRENT control set to its 1mA position).

## INSTRUCTIONS FOR TESTING SPECIFIC VALVE TYPES

32. The functions of a valve, as distinct from the type number given to it by its manufacturer, is indicated by a symbol in the form of letters appearing at the right of the test data given in “AVO” publications, e.g. a half wave rectifier is marked “R”, whilst a full wave rectifier is designated by “RR”. In a similar manner, diode valves are shown by the letter “D”, the number of diode elements being indicated by the number of “Ds”, e.g. “DDD” refers to a triple diode.

### Multiple Diodes and Rectifiers (D, DD, DDD, R, RR)

33. The testing of Multiple Diodes and Rectifiers is carried out in the manner already explained, the ELECTRODE SELECTOR being used to select the diode or rectifier element, the emission of which is indicated on the meter “replace/good” scale. When dealing with diodes or rectifiers, the  $D_1$  and  $D_2$  positions of the ELECTRODE SELECTOR represent diode or rectifier anodes 1 and 2 respectively, and correspond to figures 8 and 9 on the ROLLER SELECTOR SWITCH set-up number.

34. In the case of Triple Diodes, since only two anode systems are normally catered for, a special procedure is adopted in the set-up figure. At the position in the SELECTOR SWITCH number representing the third diode, the symbol † is included. The first and second diodes being indicated by 8 and 9 respectively in the normal manner. The valve should now be tested normally, with the ROLLER SELECTOR SWITCH set to "0" where the † appears in the set-up number. This procedure will give emission figures for diodes 1 and 2. Now rotate the ROLLER SELECTOR SWITCH rollers so that the two rollers originally set at 8 and 9 are now set to 0, and set the pin marked † in the Valve Data to 8 on the ROLLER SELECTOR SWITCH. A further test with the ELECTRODE SELECTOR Switch at  $D_1$  will then give the emission of the third diode, e.g. EAB1 is indicated in the data as 023 1†0 890. To test diodes 1 and 2 the set-up on the ROLLER SELECTOR SWITCH will be 023 100 890, enabling these diodes to be tested in the normal manner. To obtain the emission figure for the third diode the SELECTOR Switch should be altered to read 023 180 000, and the ELECTRODE SELECTOR set to position  $D_1$ .

### **Diodes and Rectifiers combined with other Electrode Assemblies (DT, DDT, DP, DDP, DTP)**

35. Combined diode and amplifying valves are represented in the type column of the Data by "DT" and "DDT" for diode triodes and double diode triodes, whilst "DP" and "DDP" indicate diode pentodes and double diode pentodes.

36. The testing of the separate sections of each valve is carried out in rotation, the amplifying sections being tested first, with the CIRCUIT SELECTOR at TEST, and the ELECTRODE SELECTOR at position  $A_1$ .

37. The rotation of the ELECTRODE SELECTOR to the  $D_1$  or  $D_2$  position will automatically set the instrument in readiness for testing one or both diodes with the right-hand ANODE CURRENT control set to 1 on the inner scale.

### **Double Triodes and Double Pentodes (TT, PP)**

38. Double Triodes or Double Pentodes are indicated by the letters "TT" or "PP", each section being tested in the normal manner, the selection of each assembly being made by the rotation of the ELECTRODE SELECTOR Switch to  $A_1$  and  $A_2$  (corresponding to the ROLLER SELECTOR SWITCH numbers 6 and 7). When double valves are used in Class B or "balanced" circuits, a close match of the characteristics of both halves is essential.

### **Frequency Changers (H, TH, O, TP)**

39. Frequency Changers of the Heptode and Hexode classes employing the normal oscillator section as a phantom cathode for the mixer section, are not very satisfactorily tested in two sections, since the nature of the valve construction is such that each section is dependent upon the other for its correct operation. For test purposes, therefore, this valve is shown connected as a pentode or triode, for which, where possible, anode current and/or mutual conductance figures are given. Such valves are indicated by the letter "H" in the type column.

40. An exception to this type of valve is the Octode, designated by "O" in the type column, which, as will be seen from the Data, is normally tested as if it had two separate electrode assemblies, separate data being given for each. In this case, the oscillator section is tested with the ELECTRODE SELECTOR Switch at  $A_1$ , and the mixer section at  $A_2$ .

41. As a further test to ensure the probability of such a valve oscillating satisfactorily, an indication of failing emission will probably give the most useful results. When a valve is perfect, its cathode will develop its full emission at the rated heater voltage, and any change in the cathode temperature will result, at the most, in a corresponding percentage change in emission. If, however, the emission of the cathode is failing, then an increase or decrease in the cathode temperature will result in a higher percentage change in emission.

42. When a valve is oscillating, it tends to run into the positive grid region, thus making full use of the emissive capabilities of the cathode, and failing emission may well prevent oscillation taking place. As a subsequent test, therefore, it is helpful to note the anode current at the rated test figures with the normal heater voltage applied, and then to decrease the heater voltage by about 15% for a short period. (It may be necessary to operate the HEATER VOLTAGE TOGGLE SWITCH to give the necessary decrease in voltage.) In the case of a valve with failing emission, the decrease in cathode temperature will result in an excessive decrease in the anode current, considerably greater than the percentage decrease in heater voltage. Such a result would suggest that the valve will not oscillate satisfactorily. Conversely, a negligible or small decrease in anode current (or of the same order as the percentage change in heater volts) will show that the valve is developing its full emission at the rated heater voltage, and, provided that the circuit conditions are correct, it should oscillate normally.

43. Frequency Changers Employing Separate Electrode Assemblies for oscillator and mixer functions are designated by "TH" (triode hexode) and "TP" (triode pentodes). The separate sections of this type of valve are not interdependent as in the case of the phantom cathode types mentioned in the previous paragraph, and they must, therefore, be tested in two separate sections as a pentode or triode respectively.

## THE USE OF THE LINKS ON THE VALVE PANEL OF THE INSTRUMENT

44. These links, in the  $A_1$  and  $A_2$  circuits respectively, enable a load to be inserted into the anode circuit of the valve under test. By removing the shorting links, and inserting the appropriate resistor (or other load) across the terminals which it is desired to include in the circuit, it is possible to obtain certain dynamic figures for the valve or electrode system under test.

45. The links also enable a suitable DC Moving Coil Ammeter with low millivolt drop to be inserted in series with the anode of the valve under test. Variations in the settings of the ANODE CURRENT controls will not materially affect the readings of the external meter, which will read 0.5 of the actual current flowing, i.e. the external meter reading must be multiplied by 2 for true anode current.

*Note 6*

*Beware of high voltages on shorting links.*

### Checking Tuning Indicators (TI)

46. Tuning indicators (Magic Eyes) are tested with the controls set to the figures in the data table, the SCREEN SWITCH being used to obtain target volts, the appropriate anode load being inserted in accordance with the value shown in the remarks column.

At the approximate bias given in the table the triode section should be at “cut off” and the eye fully closed. Reducing the grid bias to zero, the eye should open fully and the value of anode current should be approximately that appearing in the table (where given). In the case of double sensitivity indicators giving multiple images responding to different sensitivities, two sets of data (where possible) are given, the first set referring to the more sensitive indication.

### **Checking Gas Filled Rectifiers (GR)**

47. Gaseous rectifiers are tested in conjunction with a load resistor of suitable wattage connected across the link terminals, the value of resistance being given in  $K\Omega$  in the remarks column. This type of rectifier is not tested on the rectifier or diode test circuits, but with the CIRCUIT SELECTOR set to TEST, the appropriate voltage and representative anode current figures being given in the valve data columns. Full wave examples of this class of valve are, of course, tested at the ELECTRODE SELECTOR positions  $A_1$  and  $A_2$ , a suitable resistor being connected across each of the two anode links. The maximum loading on these rectifiers must be limited to 100mA per anode to avoid damage to the instrument.

### **Checking Cold Cathode Rectifiers (CCR)**

48. Cold cathode rectifiers designated by the symbol “CCR” can be tested in a similar manner, the anode voltage, approximate anode current, and load resistance being given in the data columns.

**CALIBRATION AND  
MAINTENANCE  
OF THE INSTRUMENT**


## PART 2

### CHAPTER 1

#### CALIBRATION AND MAINTENANCE OF THE INSTRUMENT

##### Instruments to be employed.

1. All measurements and tolerances stated do not include those of the testing instrument, and where necessary, these should be ascertained before commencement of the calibration procedure. Where possible, the recommended instruments should be employed. Where the Valve Voltmeter is not available in Dockyard Calibration Centres, the Electronic Instruments Model 26 Valve Voltmeter should be used on its 1V open grid position, in conjunction with a suitable potential divider as shown in Fig. 11.

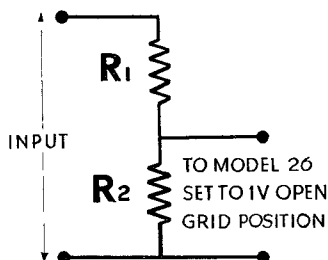

| Input Range | R <sub>1</sub> | R <sub>2</sub> |
|-------------|----------------|----------------|
| 1 Volt      | 0              | 10M $\Omega$   |
| 2.5 Volts   | 6M $\Omega$    | 4M $\Omega$    |
| 10 Volts    | 9M $\Omega$    | 1M $\Omega$    |
| 25 Volts    | 9.6M $\Omega$  | 400K $\Omega$  |
| 50 Volts    | 9.8M $\Omega$  | 200K $\Omega$  |

FIG. 11

R1 AND R2 MUST BE SELECTED TO WITHIN  $\pm 1\%$  USING GRADE ONE HIGH STABILITY RESISTORS.

##### 500 c/s A.C. Supply Operation and its Relation to Servicing

2. Whilst the instrument is suitable for use on 50—500  $\sim$  A.C. supplies, service and calibration should normally be carried out using a 220/230V 50  $\sim$  supply.

3. The following features play a vital part in the correct operation of the instrument on a 500  $\sim$  supply.

- The two electrostatic screens (S1 and S2) on the H.T. transformer prevent spurious mA/V readings, and care must be taken when replacing a transformer to ensure that these screens are connected as shown in the Circuit Diagram (Fig. 3).
- The separate cable forms lying side-by-side across the instrument ensure that the grid circuit and its associated wiring is kept well apart from H.T. wiring to prevent the transference of energy from one circuit to the other at high mains frequencies. If at any time, it is necessary to displace wiring within the instrument, great care must be taken to ensure that it is replaced in its original position.
- The 0.02 $\mu$ F (C1) and 0.02 $\mu$ F (C2) capacitors prevent spurious readings on insulation ranges when the instrument is used at high mains frequencies.

## To Check Accuracy of Instrument

4. Before commencing servicing work and on completion, the instrument should be checked to the following schedule:—

- (i) Connect the instrument to an A.C. voltage supply of 200—250V, 50 ~ of known magnitude, and set the instrument voltage adjustment to its appropriate position.
- (ii) Switch on, noting that panel indicator lights, and set MAINS VOLTAGE SELECTOR FINE CONTROL, such that the meter needle lies as near as possible to the centre of the “~” zone.
- (iii) Using a CV455 strapped as a single triode which has been standardised for mutual conductance at 16mA anode current with 200V D.C. applied to anode (see para 5 for standardisation procedure), check that for 16mA anode current, the negative grid volts indication is within  $\pm 5\%$  of the nominal voltage, and slope (mA/V) is within  $\pm 5\%$  of standardised value, using an external Avometer in series with the  $A_1$  link to read anode current. A reading of 8mA on the external instrument will be equivalent to a D.C. current of 16mA through the valve (this is the value normally indicated by the anode current controls when the meter is at its null position).
- (iv) Remove valve and external meter. With NEG GRID VOLTS Control set at 40, connect a resistance of  $680k \Omega \pm 5\%$  between grid and cathode sockets on the top cap connector panel. With the CIRCUIT SELECTOR switch set to position “GAS”, panel meter should indicate full scale deflection  $\pm 20\%$ .

## To obtain Standard Figures for a Valve using D.C. Supplies

5. The valve should be connected as shown in Fig. 12.

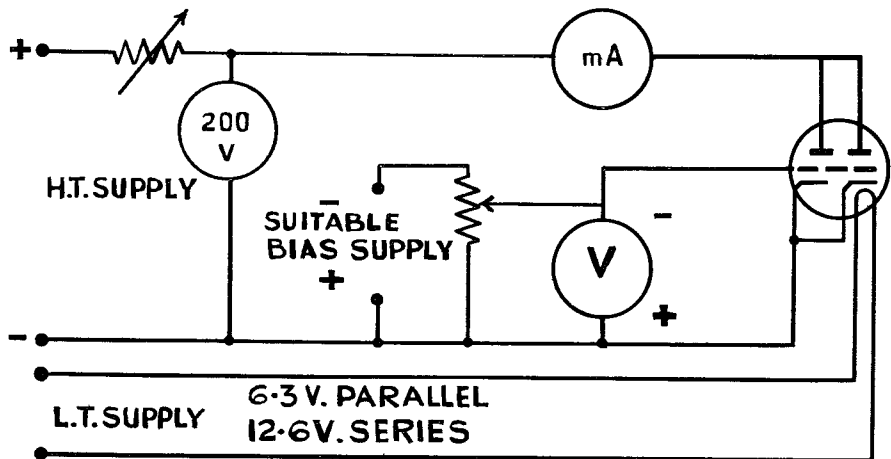


FIG. 12.

6. The meters used should be of sub-standard accuracy (E.I. Model 44) the current meter (having a maximum voltage drop of 100mV) preferably being scaled 0—25mA, the voltmeters having a sensitivity of 1,000  $\Omega$ /V. If rectified A.C. is used for the H.T. supply then it is essential that steps are taken to ensure that the supply circuit is adequately smoothed. The Solartron Varipack is a suitable source. The bias supply should be obtained from a suitable battery (note polarity of connection). The heater supply for the valve may be A.C. or D.C., but must be within  $\pm 5\%$  of the rated voltage.

7. Set the grid bias voltmeter to read 9V, adjust H.T. supply to 200V, then by means of successive adjustments of the bias and H.T. voltage controls, set the anode current at 16mA (the anode voltmeter must read 200V). Note the bias voltage reading. Re-adjust the bias control, and if necessary, the anode voltage control until the anode current is 17mA (the anode voltmeter must read 200V). Note the new grid bias voltage reading. The standardised slope for the valve can now be obtained from:—

The difference between the two anode current readings (i.e. 1mA) over the difference between the two grid voltage readings

$$\frac{I_{a2} - I_{a1}}{V_{g1} - V_{g2}}$$

The result will generally be between 4 and 5mA/V.

For greater accuracy it is suggested that readings of grid voltage be plotted against values of anode current between 10 and 20mA and the slope taken from the curve at 16mA.

8. The valve should now be labelled as follows:—

Va = 200V D.C.  
 Ia = 16mA D.C.  
 Vg = .....  
 Slope = ..... mA/V  
 Date .....  
 CV455

The valve should now be re-standardised daily when in use.

**Mechanical Features**

9. The instrument comprises two units in a hinged transit case, the lid of which is not detachable. Electrical connection between the two units is affected by means of two 5-way side-by-side cables.

**Removal of the Instrument from its case**

10. To facilitate servicing or calibration of the instrument, it is necessary to remove both sections from the casing, this being accomplished by the removal of four hexagonal headed bolts, which form the feet of the control unit, from the underside of the case. The control panel will then be released. The Valve Panel can be withdrawn from its section of the case by the removal of eight fixing screws around its periphery.

## Simple Faults

### 11.

| Symptoms   | Possible Fault   | Action   |
|--|--|--|
| (a) No dial light indication.<br><br>No dial light indication or meter deflection on SET ~ setting of CIRCUIT SELECTOR.                    | No mains input.<br>Dial light bulb burnt out.<br>Fuse blown.                               | Check mains connector.<br>Replace LP1.<br>Check MAINS VOLTAGE SELECTOR setting and replace F1 and/or F2.   |
| (b) No indication of meter current.<br><br>No indication of meter current and protective relay operates when testing tetrodes or pentodes. | No anode volts at valve pin.<br><br>No anode volts at valve pin, but screen volts present. | Check that links A <sub>1</sub> and A <sub>2</sub> are tight and making firm contact.<br>Check that links A <sub>1</sub> and A <sub>2</sub> are tight and making firm contact. |

### Relay operates and fails to clear

12. Should relay operate due to suspected faulty valve, and fail to clear after switching off and on again with no valve in panel, set ROLLER SELECTOR Switch to read 000 000 000 and remove top cap connecting lead. Switch instrument off and on.

13. If fault clears, the most likely cause of the trouble is a short on the Valve Panel, certain pin(s) being shorted out to earth by stray wire or solder, or a breakdown in insulation.

14. If the fault still persists however, check H.T. line for breakdown to earth between ROLLER SELECTOR switch on Valve Panel and H.T. transformer on control unit.

### Voltage checks with no valve under test

15. Connect instrument to *known* 220—230V 50 ~ supply, and adjust coarse and fine settings of the mains voltage selector panel, to match the supply voltage as accurately as possible. Set the CIRCUIT SELECTOR to TEST and ELECTRODE SELECTOR to A<sub>1</sub> and proceed to check the relevant electrode voltages as follows:—

### Heater Voltages

16. Use a Model '7', '8', '40', '47', '47A' or '48A' AvoMeter on its A.C. voltage ranges. Connect meter between H+ and H— sockets on top cap connector panel. Rotate the HEATER VOLTAGE Switch through the full range of values, the external meter being set to the appropriate voltage range, as required. The heater voltage reading on the meter should conform to the voltage limits shown in table 4. Due allowance must be made for the limits of accuracy of the measuring instrument for each particular reading.

TABLE 4

| Heater Switch setting<br>with Toggle Switch set<br>to its 0·625—117 Position. | Voltmeter must read<br>between these limits. |
|---|--|
| 0·625   | 0·5— 0·8                                     |
| 1·25  | 1·2— 1·45                                    |
| 2·0   | 2·2— 2·45                                    |
| 2·5   | 2·6— 3·0                                     |
| 4·0   | 4·2— 4·7                                     |
| 5·0   | 5·1— 5·5                                     |
| 6·3   | 6·6— 7·0                                     |
| 10·0  | 10·3— 10·9                                   |
| 11·0  | 11·3— 11·9                                   |
| 13·0  | 13·5— 14·1                                   |
| 16·0  | 16·3— 17·3                                   |
| 20·0  | 20·7— 21·7                                   |
| 25·0  | 26·0— 27·0                                   |
| 30·0  | 31·0— 32·2                                   |
| 48·0  | 50·3— 52·3                                   |
| 70·0  | 73·0— 76·0                                   |
| 117·0   | 123·0—130·0                                  |
| Heater Switch setting<br>with Toggle Switch set<br>to its 1·4—80 position.    |  |
| 7·5   | 7·6— 8·0                                     |

### Anode Voltages

17. Use a Model '7', '8', '40', '47', '47A' or '48A' AvoMeter on its A.C. voltage ranges. Connect meter between  $A_1$  and C sockets on top cap selector panel, rotate the ANODE VOLTAGE Switch through successive positions, the actual meter being set to the appropriate range as required. The meter readings obtained should be  $1.1 \times$  the voltage indicated by the ANODE VOLTAGE Switch  $\pm 5\%$ . Due allowance must be made for the limits of accuracy of the measuring instrument for each particular reading e.g., with the ANODE VOLTAGE Switch set to 100, actual *voltage* reading should be  $110 \pm 5\%$  volts, i.e., between 104.5 and 115.5V.

### Screen Voltages

18. Use a Model '7', '8', '40', '47', '47A' or '48A' AvoMeter on its A.C. voltage ranges. Short the anode of  $V_1(a)$  to cathode (pins 2 and 5. See Fig. 13). Connect meter between S and C on the top cap selector panel, rotate the SCREEN VOLTAGE switch through successive positions, the external meter being set to the appropriate range as

required. The meter readings obtained should be  $1.1 \times$  the voltage indicated by the SCREEN VOLTAGE switch  $\pm 5\%$ . Due allowance must be made for the limits of accuracy of the measuring instrument for each particular reading, e.g. with the SCREEN VOLTAGE switch set to 200, the actual *voltage* reading should be  $220 \pm 5\%$  volts, i.e. between 209 and 231V.

### Calibration of the Instrument

19. Use a D.C. Valve Voltmeter with an input impedance greater than  $1M \Omega$ , e.g. the "AVO" Electronic Test Meter, or the Multimeter Electronic C.T.38. The meter should be standardised at the appropriate voltages before making any adjustment mentioned in the following sections. When using the Valve Voltmeter Model 26, a potential divider should be used as in Fig. 11.

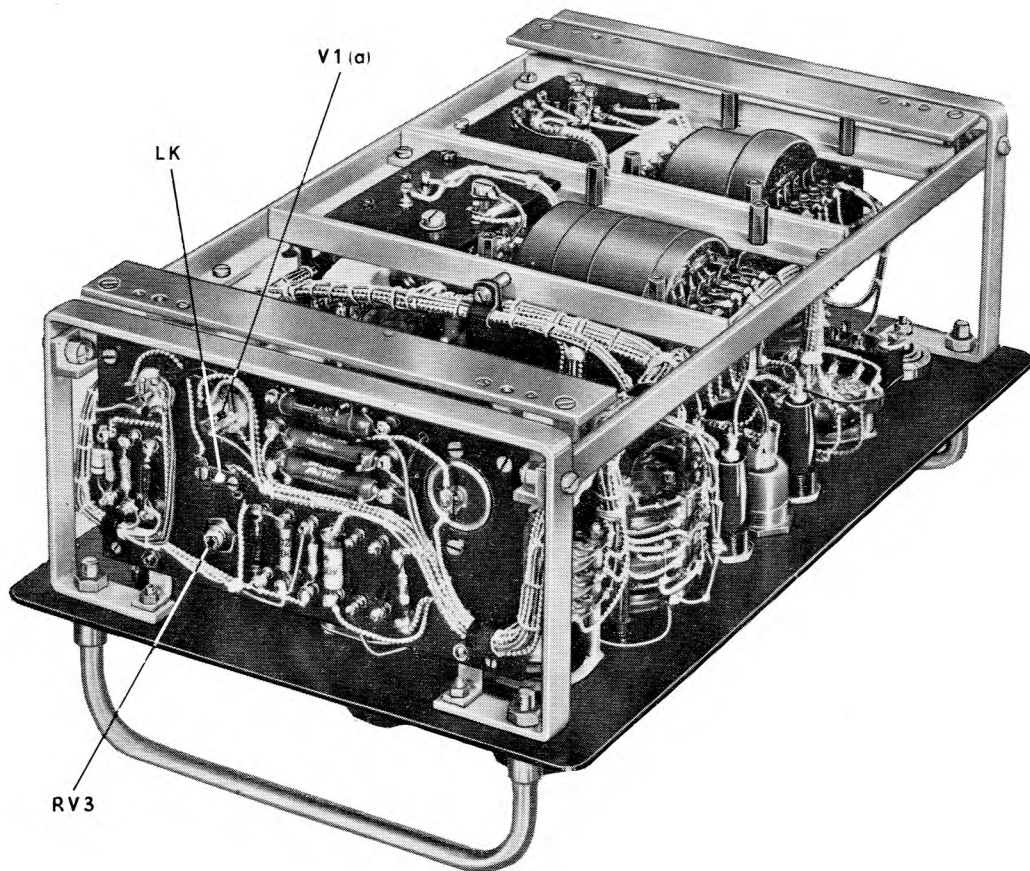


FIG. 13.

20. Open LK (Fig. 13) and set the panel controls as follows:—

CIRCUIT SELECTOR to TEST, ELECTRODE SELECTOR to A<sub>1</sub> and NEG GRID VOLTS to 40.

21. Connect measuring leads of Valve Voltmeter across RV2 (Fig. 6) and adjust RV3 (Fig. 13) until a voltage reading of 20·8V is obtained. Transfer measuring leads to G<sub>1</sub> and C sockets on the top cap connection panel, or if panel has been dis-connected for servicing, to the G<sub>1</sub> and C positions on the tag board at back of unit. (See Fig. 6.) Check that at the 13 and 4 marks of the dial readings of 6·75V and 2·1V  $\pm$  5% are obtained. If either or both readings are out of tolerance, the dial should be adjusted mechanically to split the error. If it is necessary to make an adjustment, slacken the three counter-sunk headed screws on the top of the dial, which will then be free to move within the latitude of kidney shaped slots. After adjustment, re-tighten screws and check readings. The areas marked 0, 5, 15 and 40 should correspond within the indicated area to 0V, 2·6V, 7·8V and 20·8V  $\pm$  5% respectively.

### Checking the set mA/V Control

22. Using the Valve Voltmeter set to a suitable D.C. range with the link still open, and measuring leads connected across R5, check that when the dial is advanced to its 10, 5 and 2mA/V positions, readings of 52·5mV, 105mV and 260mV  $\pm$  3% are obtained. If for any reason the relationship between the dial and the potentiometer has been upset, the procedure headed "SETTING THE mA/V DIAL" should be adopted. (See para 34.)

### Checking the set ~ indication

23. Standardise the Valve Voltmeter at 47V D.C. Close the link LK (Fig. 13) and set the panel controls as follows:—

CIRCUIT SELECTOR to SET ~ and ELECTRODE SELECTOR to A<sub>1</sub>.

24. With the Valve Voltmeter connected across RV<sub>2</sub>, a reading of 47 volts should now be obtained, whilst the meter on the instrument panel should indicate within the "~" zone. If voltage reading is correct, but panel meter indication is outside "~" zone, check resistors R<sub>3</sub> and R<sub>4</sub>.

### Ia Calibration check

25. Open the A<sub>1</sub> link on the valve base panel, and insert a suitable D.C. Moving Coil Ammeter, e.g. a Model '7', Model '40' or similar AvoMeter into the circuit. Set up the instrument, and place under test any power valve capable of passing 100mA anode current, e.g. KT33C (CV1503), KT66 (CV1075), or 807 (CV124). Set the ANODE CURRENT controls to 100mA (90mA + 10mA), and with the instrument set to its TEST position, allow the valve to warm up, and return the panel meter needle to zero by means of the NEG GRID VOLTS control. The external meter should then indicate between 47·5mA and 52·5mA (0·5  $\times$  indicated value on ANODE CURRENT controls  $\pm$  5%), the panel instrument indicating zero. If required, repeat this test at any other settings of ANODE CURRENT controls.

### The Indicating Meter

26. This is a self-contained unit which may be withdrawn from the control panel by the removal of two 2BA screws (see Fig. 6).

27. When used in the instrument as an anode current null indicator, the meter has a full scale deflection for approximately 10mA (not critical). When removed from the instrument, the meter has a full scale deflection of  $30\mu\text{A}$  and an internal resistance of  $3,250\ \Omega$ . When shunted by R9 only (see circuit diagram), the meter has a full scale deflection of  $39\cdot8\mu\text{A}$ .

#### Adjustment of Protective Relay

28. The protective relay should seldom require attention, but if, for any reason, parts are replaced, the adjustment is simple, it only being necessary to position two 4BA screws (insulated tools must be used for this adjustment). (See Fig. 6.) It should be noted that the bobbins, if replaced, should be positioned such that the flux which they produce is additive.

29. Operational limits are as follows:—

- (i) Anode overload—Relay should operate on 100V short circuit.
- (ii) Screen overload—Relay should operate on 60V short circuit.
- (iii) The relay should not arc excessively on a 200V short circuit on anode or screen.
- (iv) The Relay should not operate when checking a 120mA rectifier.

30. Before making any adjustments, check that the lamp LP1 is operative. When the instrument is used solely on a 110V supply, it may be preferable to replace LP1 with a 100V, 15W Pigmy lamp.

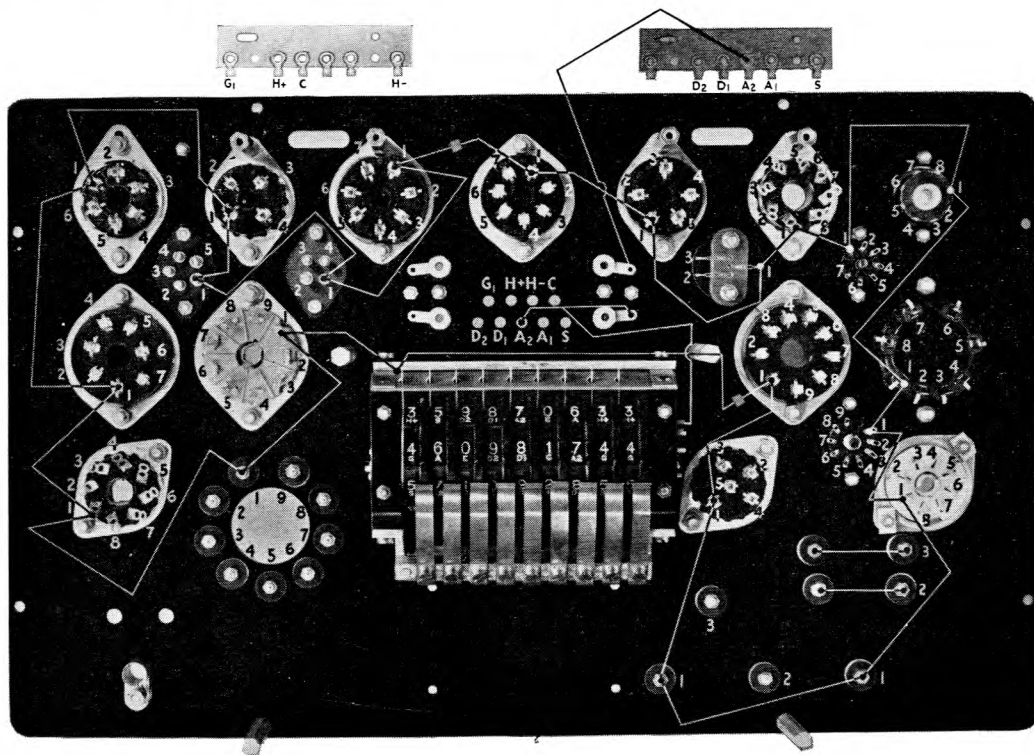


FIG. 14.

## **Servicing the Valve Holder Panel**

31. The Valve Holder Panel is connected electrically to the control panel by means of two 5-way side-by-side cables. One of these cables embodies two thicker sections (16/·012") for H+ and H— leads. Connections to tag boards on either unit are shown in Fig. 14.

32. The wiring of the valve holders on the panel is in the form of nine separate loops, all pins 1 comprising a loop and linking in roller 1 of the ROLLER SELECTOR switch. This form of loop connection is used likewise for pins 2—9, all nine circuits approximating in length and following a similar route around the panel. These loops are further loaded with beads of ferroxcube which sufficiently damp the loop to prevent the valve under test breaking into parasitic oscillation. A diagrammatic layout is shown in Fig. 14. Ferroxcube is also used on leads feeding the SELECTOR SWITCH, as a precaution against L.F. oscillation. Where it is necessary to replace valve holders, these, with the exception of the B8B, are fitted to the panel with nuts and bolts, and are, thus, easily removable. Care should be taken to replace all wiring in its original position.

## **Removal and Replacement of Knobs and Setting of Knob Skirts**

33. To remove any knob, remove 6BA screw and spring washer. To remove knob spindle and skirt release locking pin. The switch nut is now accessible. To adjust skirt, slacken lock nut, rotate skirt to desired position, and re-tighten lock nut. Reverse procedure to replace.

## **Setting the mA/V Dial**

34. With the link open, and the SET mA/V dial at rest, turn RV1 to its maximum anti-clockwise position (viewing from the front panel) and adjust friction tight the locking nuts of the U shaped stirrup. Connect Valve Voltmeter, set to a suitable range across R5 and advance SET mA/V dial to a reading of 5. Rotate the RV1 spindle further, by means of the stirrup, in a clockwise direction until the D.C. Valve Voltmeter shows a reading of 105mV. If this reading is achieved without further clockwise advancement of the stirrup, or if its procurement necessitates an anti-clockwise movement of the stirrup, then investigate the accuracy of R1, R2, R5 and RV1. The locking nuts on the stirrup should now be tightened, and the reading of 105mV on the voltmeter checked. Again check that the D.C. millivolts developed across R5 at the 2mA/V and 10mA/V settings of the dial are 260mV and 52·5mV  $\pm$  3%. Check that the dial can now be rotated to its 1mA/V position and that motion is eventually arrested by the stop screw on the dial, and not by the stop at the end of the potentiometer track.